

ROCKY FLATS PLANT
EMD OPERATING
PROCEDURES MANUAL

Manual No.: 5-21000-OPS-SW
Procedure No.: Table of Contents, Rev 5
Page: 1 of 2
Effective Date: 02/20/92
Organization: Environmental Management

THIS IS ONE VOLUME OF A SIX VOLUME SET WHICH INCLUDES:

VOLUME I: FIELD OPERATIONS (FO)
VOLUME II: GROUNDWATER (GW)
VOLUME III: GEOTECHNICAL (GT)
VOLUME IV: SURFACE WATER (SW)
VOLUME V: ECOLOGY (EE)
VOLUME VI: AIR (AP)

TABLE OF CONTENTS
FOR VOLUME IV: SURFACE WATER

<u>Procedure No.</u>	<u>Title</u>	<u>Rev. No.</u>	<u>Effective Date</u>
SW.1	Surface Water Data Collection Activities	1	08/30/91
SW.2	Field Measurement of Surface Water Field Parameters	1	08/30/91
SW.3	Surface Water Sampling	1	03/30/91
SW.4	Discharge Measurement	1	08/30/91
SW.5	Base Laboratory Work		
SW.6	Sediment Sampling	1	08/30/91
SW.7	Collection of Tap Water Samples	1	08/30/91
DCN 91.01	Superseded by DCN 91.02		08/16/91
DCN 91.02	Add one minute purge time for sampling carbon treatment system		12/12/91
DCN 92.01	Clarification of purge requirements	1	03/03/92
SW.8	Pond Sampling	1	08/30/91
SW.9	Industrial Effluent and Pond Discharge Sampling	1	08/30/91

ADMIN RECORD

"REVIEWED FOR CLASSIFICATION"

By T. J. Delaney

Date 19 MAR 92

ROCKY FLATS PLANT
EMD OPERATING
PROCEDURES MANUAL

Manual No.: 5-21000-OPS-SW
Procedure No.: Table of Contents, Rev 3
Page: 2 of 2
Effective Date: 02/20/92
Organization: Environmental Management

<u>Proc. No.</u>	<u>Title</u>	<u>Rev. No.</u>	<u>Effective Date</u>
SW.10	Event-Related Surface Water Sampling	1	02/20/92
SW.11	Operation and Maintenance of Stream-Gaging and Sampling Stations	1	02/20/92
SW.12	Site Description	1	08/30/91
SW.13	Bacteriological Water Sampling	1	08/30/91
SW.14	Automatic Sampling		
SW.15	River and Ditch Sampling	1	08/30/91
SW.16	Sampling of Incidental Waters	1	08/30/91

EVENT-RELATED SURFACE-WATER SAMPLING

**EGG ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.10, Rev. 1
1 of 10
December 23, 1991
EMD**

Category 3

**TITLE: EVENT-RELATED SURFACE-
WATER SAMPLING**

Approved by:

This is a

CONTROLLED DOCUMENT

James P. Kelly

2/20/92

EGG — ROCKY FLATS PLANT

EMD, Manager

Date

~~ENVIRONMENTAL PROTECTION DEPARTMENT~~

This is a RED Stamp

TABLE OF CONTENTS

TABLE OF CONTENTS	1
1.0 PURPOSE	2
2.0 SCOPE	2
3.0 REFERENCES	2
4.0 LIMITATIONS AND PRECAUTIONS	3
5.0 PREREQUISITES	3
6.0 INSTRUCTIONS	4
6.1 Removal of Composite or Sequential Sample Containers from Automatic Samplers	4
6.2 Compositing of Samples	5
6.3 Transfer of Samples to Laboratory Containers	7
6.4 Preparation of Automatic Samplers and Flow Meters for Subsequent Sampling Events	7
6.5 Decontamination of Automatic Sampling Equipment	8
6.6 Documentation	9
7.0 DISPOSITION	9
• ATTACHMENT 1	10

REVIEWED FOR CLASSIFICATION/UCNI

By *Michael Johnson*
Date *Feb. 20, 1992*

EVENT-RELATED SURFACE-WATER SAMPLING

EG&G ROCKY FLATS PLANT EMD OPERATING PROCEDURES MANUAL	Manual: Procedure No.: Page: Effective Date: Organization:	5-21000-OPS SW.10, Rev. 1 2 of 10 December 23, 1991 EMD
Category 3		

1.0 PURPOSE

The purpose of this procedure is to establish protocols for the processing of surface-water samples collected with automatic samplers during snowmelt runoff, storm runoff, and pond discharge events at stream gaging stations at Rocky Flats Plant (RFP).

2.0 SCOPE

These procedures apply to all Environmental Management Department (EMD) and subcontractor personnel performing sampling as part of the event-related surface-water monitoring program at RFP. Physical and water-quality variables included in this program are described in the Work Plan for Event-Related Surface Water Monitoring and Sediment Characterization (EG&G, 1991a). Procedures for the operation of the automatic samplers are described in Operations Procedure 5-21000-OPS-SW.11 - Operation and Maintenance of Stream Gaging and Sampling Stations (EG&G, 1991b).

3.0 REFERENCES

3.1 Source References

- Isco, Inc., 1990a. Instruction Manual for Model 3700R/3740 Refrigerated Sampler.
- Isco, Inc., 1990b. Instruction Manual for Model 3700 Portable Sampler.

3.2 Internal References

- EG&G Rocky Flats, Inc., 1991a. (Draft) Work Plan for Event-Related Surface Water Monitoring and Sediment Characterization.
- EG&G Rocky Flats, Inc., 1991b. EMD Operations Procedures Manual: 5-21000-OPS-SW: Surface Water.
- EG&G Rocky Flats, Inc., 1991c. EMD Operations Procedures Manual: 5-21000-OPS-FO: Field Operations.

EVENT-RELATED SURFACE-WATER SAMPLING

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.10, Rev. 1
3 of 10
December 23, 1991
EMD

- EG&G Rocky Flats, Inc., 1990. (Draft) Environmental Evaluation Procedures for Waste Management Areas at Rocky Flats.

4.0 LIMITATIONS AND PRECAUTIONS

- 4.1 Sampling crews will be responsible for collecting, containerizing, labelling, and shipping of samples, as well as maintaining and preparing automatic samplers and flow meters for the next sampling event.

5.0 PREREQUISITES

- 5.1 Personnel executing the protocols described in this Operations Procedure should be instructed in the operation of the automatic samplers and flow-measurement equipment used at the gaging stations. At least one person on the field crew should have one (1) year of field experience sampling either surface water or ground water. All field personnel should have satisfied Occupational Safety and Health Administration (OSHA) training requirements for work at hazardous waste sites (29 CFR 1910.120).

- 5.2 Each sampling crew will be required to obtain the following equipment prior to sampling:

- Sample containers/bottles
- Coolers
- Thermometer
- Blue ice
- Sample labels
- Chain-of-Custody forms
- Custody seals
- Decontamination equipment
- Sample preservatives (HNO₃, HCl)
- Plastic baggies for containers and blue ice
- Strapping and clear tape
- Garbage bags
- Replacement tubing
- Black waterproof pen

EVENT-RELATED SURFACE-WATER SAMPLING

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.10, Rev. 1
4 of 10
December 23, 1991
EMD

Category 3

- Recharged nicad batteries
- Field data transfer equipment (laptop computer)

6.0 INSTRUCTIONS

NOTE

The following equipment is present at each gaging station included in the event-related surface water monitoring program:

- Isco Model 3700R Refrigerated Sampler
- Isco Model 3220 or 3230 Flow Meter

Some stations may also be equipped with:

- Isco Model 3700 Portable Sampler

6.1 Removal of Composite or Sequential Sample Containers from Automatic Samplers

- 6.1.1 Upon arrival at the gaging station, unlock the instrument enclosure and remove the top and front panels to expose the automatic sampling equipment.
- 6.1.2 Open the door of the refrigerated sampler (Isco Model 3700R) or remove the top and center sections of the portable sampler (Isco Model 3700).
- 6.1.3 Remove the composite sample container or rack of sequential sample containers. The rack of sequential bottles should be removed from the 3700R by lifting the front edge of the rack to disengage it from the two ramps, and pulling it straight out of the refrigerator. Care must be taken not to catch the rack on the distributor arm. Bottles in the Isco Model 3700 sampler are directly accessible once the top and center sections of the sampler have been removed. In both cases, at the sampling crew's discretion, caps can be placed on bottles to prevent spillage during handling.

EVENT-RELATED SURFACE-WATER SAMPLING

EG&G ROCKY FLATS PLANT EMD OPERATING PROCEDURES MANUAL	Manual: Procedure No.: Page: Effective Date: Organization:	5-21000-OPS SW.10, Rev. 1 5 of 10 December 23, 1991 EMD
Category 3		

6.2 Compositing of Samples

When the automatic sampler has collected samples in the sequential mode (using sequential sample containers), the samples that were collected during the event being studied may be combined to yield a representative composite sample. Two types of composite samples may be generated during this program. These are flow-weighted composites and equal-volume composites.

NOTE

Equal-volume composite samples may be generated by combining an equal volume of water from each of the sample containers that were filled during the event being sampled. Samples should be combined with an effort made to maximize total sample volume. This will be accomplished by using the entire volume of the sequential sample containing the lowest liquid level and using equal volumes from each of the other sample bottles.

- 6.2.1 Sequential samples should be capped and gently shaken immediately prior to compositing to resuspend any solids that may have settled to the bottom of the container.
- 6.2.2 Measure an equal volume of each sequential sample to be combined in a 1-liter glass graduated cylinder and pour this aliquot into the composite container. A glass composite container should be used for organic samples and a polyethylene or teflon composite container for metal or radionuclide samples.
- 6.2.3 Rinse the cylinder with distilled water between measurement of each sequential sample. Care must be taken to drain the cylinder as completely as possible after each rinse to avoid dilution of the sample. Rinseate from this procedure should be handled as described in Operations Procedure 5-212000-OPS-FO.07 - Handling of Decontamination Water and Wash Water (EG&G, 1991c).

NOTE

Flow-weighted composite samples will be generated by combining volumes of water from each of the sample containers proportional to the flowrate at the time each

EVENT-RELATED SURFACE-WATER SAMPLING

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.10, Rev. 1
6 of 10
December 23, 1991
EMD

Category 3

sample container was filled. Samples should be combined with an effort made to maximize the total sample volume. This will be accomplished by using the entire volume of the sample collected at the highest flowrate and using proportional volumes of sample from preceding and following bottles. For any given sampling time, the ratio of the flowrate at that time to the maximum flowrate during the sampling period multiplied by the volume of the sample collected at the maximum flowrate will give the flow-weighted volume for that sampling time to be used in the composite sample.

- 6.2.4 Remove strip-chart from flow meter or interrogate flow meter using lap-top computer to obtain a table of level or flowrate data versus time.
- 6.2.5 Using the level or flow data obtained in step 6.2.4, determine the maximum water level or flowrate at which a sample was collected during the sampling period.
- 6.2.6 For each sequential sample, calculate the ratio of the water level or flowrate at the time that the sample was collected to the maximum water level or flowrate.
- 6.2.7 For each sequential sample, multiply the ratio calculated in step 6.2.6 by the volume of sample collected at the maximum water level or flowrate. This will give the flow-weighted volume for each sample.
- 6.2.8 Sequential samples should be capped and gently shaken immediately prior to compositing to resuspend any solids that may have settled to the bottom of the container.
- 6.2.9 Using the flow-weighted volumes calculated in step 6.2.7, measure an aliquot from each sequential sample to be combined in a 1-liter glass graduated cylinder and pour this aliquot into the composite container. A glass composite container should be used for organic samples and a polyethylene or teflon composite container for metal or radionuclide samples.
- 6.2.10 Rinse the cylinder with distilled water between measurement of each sequential sample. Care must be taken to drain the cylinder as completely as possible after each rinse to avoid dilution of the sample. Rinsate from this procedure should be

EVENT-RELATED SURFACE-WATER SAMPLING

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.10, Rev. 1
7 of 10
December 23, 1991
EMD

handled as described in Operations Procedure 5-212000-OPS-FO.07 - Handling of Decontamination Water and Wash Water (EG&G, 1991c).

6.3 Transfer of Samples to Laboratory Containers

- 6.3.1 Before sampling the water in the composite or sequential containers, containers should be capped and shaken to resuspend all solids which may have settled to the bottom. This procedure should be repeated frequently throughout the sampling procedure.
- 6.3.2 Using a funnel, if necessary, pour sample aliquots into the proper laboratory containers for the analyses to be performed. A stainless-steel funnel should be used when sampling for organic analytes, and a polyethylene or teflon funnel should be used for metals and radionuclides. Attachment 1 lists the types of containers and volumes required for the various analytes of interest.
- 6.3.3 Label sample containers, preserve samples as necessary (see Attachment 1 for preservative requirements), and place samples in coolers in accordance with Operations Procedure 5-21000-OPS-FO.13 - Containerizing, Preserving, Handling & Shipping of Soil and Water Samples (EG&G, 1991c).

6.4 Preparation of Automatic Samplers and Flow Meters for Subsequent Sampling Events

When the processing of surface-water samples for a single event is complete, the sampling crew should prepare the gaging station for the next sampling event. The Work Plan for Event-Related Surface Water Monitoring and Sediment Characterization (EG&G, 1991a) should be consulted for information on types of analytes to be sampled and whether the sampler should be set in the composite or sequential sampling mode.

- 6.4.1 Place clean composite or sequential containers in the Isco automatic sampler. When using composite sample bottles, the pump tubing should be inserted through the hole in the bottle lid. When changing from the sequential mode to the composite sample mode or vice versa, the distributor arm assembly in the sampler must be changed accordingly. Consult Operations Procedure 5-21000-OPS-SW.11

EVENT-RELATED SURFACE-WATER SAMPLING

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.10, Rev. 1
8 of 10
December 23, 1991
EMD

Category 3

- Operation and Maintenance of Stream Gaging and Sampling Stations (EG&G, 1991b), and the Instruction Manuals for the Isco 3700 (Isco, 1990b) and 3700R (Isco, 1990a) samplers for correct procedures for all facets of automatic sampler use and programming.

- 6.4.2 Program the automatic sampler for the next event. Consult Operations Procedure 5-212000-OPS-SW.11 - Operation and Maintenance of Stream Gaging and Sampling Stations (EG&G, 1991b), and the Instruction Manuals for the Isco 3700 (Isco, 1990b) and 3700R (Isco, 1990a) samplers for correct procedures for all facets of automatic sampler use and programming.

6.5 Decontamination of Automatic Sampling Equipment

- 6.5.1 Decontaminate all sequential and composite sample containers and prepare for reuse after they have been used during a sampling event. Procedures for proper cleaning of these containers are detailed in Operations Procedure 5-212000-OPS-FO.03 - General Equipment Decontamination, Section 5.4 (EG&G, 1991c).
- 6.5.2 Containerize and dispose all water used during decontamination in accordance with Operations Procedure 5-212000-OPS-FO.07 - Handling of Decontamination Water and Wash Water (EG&G, 1991c).
- 6.5.3 During normal sampling operations, the automatic sampler itself should not require cleaning. Cleaning should be performed as a quarterly maintenance activity. More frequent cleaning of the automatic samplers may be performed at the discretion of the field crew if the interior or exterior surfaces of the sampler appear soiled or dusty. When cleaning of the sampler is necessary, procedures outlined in Operations Procedure 5-212000-OPS-SW.11 - Operation and Maintenance of Stream Gaging and Sampling Stations (EG&G, 1991b) should be followed. Decontamination water from this procedure should be handled as described in Operations Procedure 5-212000-OPS-FO.07 - Handling of Decontamination Water and Wash Water (EG&G, 1991c).

EVENT-RELATED SURFACE-WATER SAMPLING

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-CWS
SW.10, Rev. 1
9 of 10
December 23, 1991
EMD

Category 3

6.6 Documentation

6.6.1 Field crews should record summary information of daily activities in the Field Activity Daily Log. The field activity daily log narrative should create a chronological record of the sampling crew's activities, including the date and time each site is visited. Descriptions of sampling activities at each station, problems encountered, deviations from this Operations Procedure, and the number of Field Activity Daily Log Sheets used to record sampling crew activities for a given day will also be included. Log entries should include, at a minimum, the following information:

- Date and time of each entry or activity
- Names of sampling crew
- Names of all visitors to the site during field activities
- Gaging station ID
- Mode of automatic sampler (composite or sequential) upon both arrival and departure
- Method of sampling (sequential, equal-volume composite, or flow-weighted composite)
- Date and time sampling program started (first sample)
- Date and time sampling program ended (last sample)
- Number of samples collected
- Time interval between samples
- Bottle volume and material
- Amount of sample in bottle
- Stage at which sampling program initiated
- Type of event sampled
- Weather conditions
- Comments and observations

7.0 DISPOSITION

Authentication of the completion of this procedure is documented by signing the last page of the field activity daily log entry for each day.

EVENT-RELATED SURFACE-WATER SAMPLING

**EG&G ROCKY FLAT PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPB
SW.10, Rev. 1
10 of 19
December 23, 1981
EMD**

Category 3

**Attachment 1: Sample Volume, Container, and Preservation Requirements for Analytes
in the Event-Related Surface-Water Monitoring Program**

Class of Analytes	Volume of Individual Sequential Samples Collected from Automatic Sampler	Volume Required for Analytical Methods	Preservative	Container Type
Target Analyte List (TAL) Metals	1 l	100 ml	HNO ₃ to pH<2	Polyethylene
Non-TAL Metals	1 l	100 ml	HNO ₃ to pH<2	Polyethylene
Radionuclides	1 l	200 ml	HNO ₃ to pH<2	Polyethylene
Target Compound List (TCL) Semi-Volatiles	350 ml	2 x 1 l	Cool 4°C	Glass-Amber
TCL Volatiles*	350 ml	3 x 40 ml	Cool 4°C HCl to pH<2	Glass-VOA
Pesticides/PCBs	350 ml	2 x 1 l	Cool 4°C	Glass-Amber
Indicators				
Total Dissolved Solids	1 l	100 ml	Cool 4°C	Polyethylene
Total Suspended Solids	1 l	100 ml	Cool 4°C	Polyethylene
pH	1 l	100 ml	Cool 4°C	Polyethylene
Nitrate	1 l	100 ml	Cool 4°C	Polyethylene

* Volatiles samples cannot be collected using automatic samplers and must be collected manually.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
1 of 60
January 13, 1992
EMD

TITLE: OPERATION AND MAINTENANCE
OF STREAM-GAGING AND SAMPLING
STATIONS

Approved by:

This is a

CONTROLLED DOCUMENT

EG&G ROCKY FLATS PLANT

Facul October 21 20 92

ENVIRONMENTAL MANAGEMENT DEPARTMENT

EMD, Manager

Date

This is a RED Stamp TABLE OF CONTENTS

TABLE OF CONTENTS	1
1.0 PURPOSE	4
2.0 SCOPE	4
3.0 REFERENCES	4
3.1 SOURCE REFERENCES	4
3.2 INTERNAL REFERENCES	4
4.0 LIMITATIONS AND PRECAUTIONS	5
5.0 PREREQUISITES	5
6.0 INSTRUCTIONS	5
6.1 OPERATION OF AUTOMATIC SAMPLERS	6
6.1.1 Programming	6
6.1.2 Conversion from Sequential to Composite Sampling	8
6.1.2.1 Conversion of the Isco Model 3700R Refrigerated Sampler	8
6.1.2.2 Conversion of the Isco Model 3700 Portable Sampler	9
6.2 OPERATION OF FLOW METERS	10
6.2.1 Programming	10
6.2.2 Operation of the Bubble Rate Adjust Valve (Model 3230 Only)	16
6.3 MAINTENANCE OF AUTOMATIC SAMPLERS	17
6.3.1 Cleaning the Sampler	17
6.3.2 Replacement of the Pump Tubing	18
6.3.3 Changing the Internal Desiccant	20
6.3.4 Charging the Nicad and Lead-Acid Battery Packs	21
6.3.4.1 Charging	22
6.3.4.2 Fuse Replacement	23

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
2 of 60
January 13, 1992
EMD

Category 3

6.4 MAINTENANCE OF FLOW METERS	23
6.4.1 Care of the Flow Meter Case	24
6.4.1.1 Care of the Case Seal	24
6.4.1.2 Preventing Moisture Damage	24
6.4.2 Reactivation of the Desiccant	25
6.4.2.1 Checking and Regenerating the Internal Case Desiccant	25
6.4.2.2 Regenerating the External Desiccant Cartridges	26
6.4.3 Bubble Line Maintenance (Model 3230 Only)	27
6.4.4 Maintenance of the Internal Plotter	28
6.4.4.1 Changing the Paper Roll	28
6.4.4.2 Installing a New Paper Roll	29
6.4.4.3 Re-threading the Paper	29
6.4.4.4 Ink Ribbon Replacement	30
6.4.5 Charging the Nicad Battery Pack	31
6.4.5.1 Charging	32
6.4.5.2 Fuse Replacement	32
6.5 FLOWLINK SOFTWARE DATA TRANSFER	33
6.6 DOCUMENTATION	34
7.0 DISPOSITION	35
ATTACHMENT 1 Automatic Sampler Description	36
ATTACHMENT 2 Automatic Sampler Operation	37
ATTACHMENT 3 Automatic Sampler Keypad Functions	39
ATTACHMENT 4 Automatic Sampler Time-Paced Sequential Sampling	40
ATTACHMENT 5 Automatic Sampler Time-Paced Composite Sampling	42
ATTACHMENT 6 Automatic Sampler Interactive State Structure	45
ATTACHMENT 7 Automatic Sampler Configure Option Functions	46
ATTACHMENT 8 Flow Meter Description	47
ATTACHMENT 9 Switch and Keypad Description	48
ATTACHMENT 10 Internal Plotter Description	51
ATTACHMENT 11 Programming Overview	52
ATTACHMENT 12 Nicad and Lead-Acid Battery Packs	53
ATTACHMENT 13 Internal Plotter Example Report	54
ILLUSTRATION 1 Isco Model 3700R Refrigerated Sampler	56
ILLUSTRATION 2 Isco Model 3700 Portable Sampler	57
ILLUSTRATION 3 Isco Model 3220 Flow Meter Front Panel	58

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
3 of 60
January 13, 1992
EMD**

Category 3

ILLUSTRATION 4 Isco Model 3230 Flow Meter Side View 59
ILLUSTRATION 5 24-Position Keypad 60

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
4 of 60
January 13, 1992
EMD**

Category 3

1.0 PURPOSE

The purpose of this Operations Procedure is to establish protocols for the operation and maintenance of automatic sampling and flow-measurement equipment at stream-gaging and sampling stations at the Rocky Flats Plant. Procedures are described in detail for the day-to-day operation and periodic maintenance of the equipment. Additional information is available in the instruction manuals for the specific equipment discussed herein.

2.0 SCOPE

These procedures apply to all Environmental Management Department (EMD) and subcontractor personnel involved with stream gaging and surface-water sampling as part of the event-related surface-water monitoring program at RFP. These procedures instruct the personnel in the correct execution of protocols for the operation and maintenance of the automatic samplers and flow meters used at stream-gaging and sampling stations included in this program.

3.0 REFERENCES

3.1 SOURCE REFERENCES

1. Isco, Inc., 1990a. Instruction Manual for Model 3220 Flow Meter.
2. Isco, Inc., 1990b. Instruction Manual for Model 3230 Flow Meter.
3. Isco, Inc., 1990c. Instruction Manual for Model 3700R/3740 Refrigerated Sampler.
4. Isco, Inc., 1990d. Instruction Manual Model 3700 Portable Sampler.
5. Isco, Inc., 1991e. Instruction Manual for FLOWLINK Software.

3.2 INTERNAL REFERENCES

1. EG&G Rocky Flats, Inc., 1991a. (Draft) Work Plan for Event-Related Surface Water Monitoring and Sediment Characterization.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT EMD OPERATING PROCEDURES MANUAL	Manual: Procedure No.: Page: Effective Date: Organization:	5-21000-OPS SW.11, Rev. 1 5 of 60 January 13, 1992 EMD
---	---	---

Category 3

2. EG&G Rocky Flats, Inc., 1991b. EMD Operations Procedures Manual: 5-21000-OPS-SW.10: Event-Related Surface-Water Sampling.
3. EG&G Rocky Flats, Inc., 1991c. EMD Operations Procedures Manual: 5-21000-OPS-FO: Field Operations.

4.0 LIMITATIONS AND PRECAUTIONS

Stream-gaging and sampling crews will be responsible for the operation and maintenance of automatic samplers and flow meters as well as the transfer of collected data using the Isco FLOWLINK software.

5.0 PREREQUISITES

Personnel executing the protocols described in this Operations Procedure should be instructed in the operation of the automatic samplers and flow-measurement equipment used at the gaging and sampling stations. At least one person in each field crew should have one (1) year of field experience sampling either surface water or ground water. All field personnel should have satisfied Occupational Safety and Health Administration (OSHA) training requirements for work at hazardous waste sites (40 CFR 1910.120)

Each sampling crew is required to be equipped with the following items during the operation and maintenance of stream-gaging and sampling stations:

- Spare desiccant
- Replacement tubing
- Field data transfer equipment (laptop computer)
- Plotter paper

6.0 INSTRUCTIONS

This section contains information on the operation and maintenance of automatic samplers and flow meters.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Category 3

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
6 of 60
January 13, 1992
EMD

6.1 OPERATION OF AUTOMATIC SAMPLERS

See Attachments 1 and 2 for a description and overview of the automatic samplers. Illustration 1 shows an Isco Model 3700R Refrigerated Sampler and Illustration 2 shows an Isco Model 3700 Portable Sampler.

6.1.1 Programming

NOTE

The Liquid Crystal Display (LCD) is used to prompt the user through the programming and configuration process and allows the user to monitor a running sample routine. The LCD is located on the control panel of both the Isco Model 3700 and Model 3700R samplers.

There are two types of displays: displays that communicate information about the sampler's status and those which require input from the user via the keypad. Displays which require input can be identified by a blinking word or number. The blinking word or number serves as a prompt for input.

Configuring and programming the Isco Model 3700 and Model 3700R samplers is accomplished by responding to displays and prompts on the LCD by using the keypad. The keypad is located on the control panel of both the Isco Model 3700 and Model 3700R samplers. Attachment 3 explains the function of each key on the keypad. An audible beep should be heard when a key is pressed.

Programming Steps - The steps necessary to program the Isco Model 3700R or Model 3700 samplers are outlined below:

1. Turn the sampler on with the ON/OFF key. The sampler always "wakes" up in the "standby" state. The "STANDBY" message will appear or, if the sampler was turned off while running a routine, the "PROGRAM HALTED" message will be displayed. Both messages indicate that the sampler is in standby mode.
2. Press the ENTER/PROGRAM key to access the interactive state. Select the program sequence. If the user wishes to return to a previous display during the programming

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Category 3

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
7 of 60
January 13, 1992
EMD

sequence, he/she can press the EXIT PROGRAM key. The sampler will return to the standby state and the user can repeat steps 1 and 2 and then press the ENTER/PROGRAM key to scroll through the settings until the desired display is located.

3. **Enter the Sample Pacing settings.** The sampler will prompt the user to select either time- or flow-paced sampling. For the event-related surface-water monitoring program, time-paced sampling will be selected for most applications. The user will then be prompted to enter the time interval between samples. Alternatively, the flow-pulse interval may be entered if flow-paced sampling is selected.
4. **Enter the Sample Distribution settings.** The settings in the Sample Distribution section allow the user to perform sequential or multiplexed sampling. The first display asks the user if multiplexing is desired. Selecting "NO" means sequential sampling is desired. The sampler will then prompt the user for bottle volumes.
5. **Enter the Sample Volume settings.** The Sample Volume section contains prompts for the sample volume. Depending on the selections made in the configure sequence, it may contain prompts for suction head and for sampler calibration. Because the actual sample volume varies by ± 10 ml, the user should enter a total sample volume that is slightly less than the volume of the bottle.
6. **Enter the Key Times settings.** In the basic programming mode, the user will be asked if he/she wants to enter a specific start time for the routine. If "YES" is selected, the user will be prompted to enter a start time and date. If "NO" is selected, the sampler will use the start time delay. The start time delay can be set between 0 and 999 minutes in the Start Time Delay configure option.
7. **The sampler will automatically return to standby.**
8. **From standby, press the START SAMPLING key to start the routine.** This will place the sampler into the "run" state. If a start time delay has been entered, the delay begins when the START SAMPLING key is pressed. The user will be prompted to enter the starting bottle number. To begin with bottle 1, press the ENTER/PROGRAM key. If no response is made within 60 seconds, the sampler will automatically begin with bottle 1.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
8 of 60
January 13, 1992
EMD

Category 3

9. Use the run state displays while running the sampling program to monitor the sampler's progress.

NOTE

See Attachments 4 and 5 for step-by-step instructions on how to program the sampler for time-paced sequential and time-paced composite sampling, respectively. These Attachments also illustrate the display that the user will find on the LCD at each programming step. Illustration 5 shows the 24-position keypad on an Isco Model 3700 Portable Sampler.

The program sequence and the configure sequence are interdependent. The selections made in the configure sequence determine what settings will be available in the program sequence. Attachment 6 illustrates the relationship of the program and configure sequences within the interactive state. Attachment 7 summarizes the options available in the configure sequence. Programming in the configure sequence is analogous to the programming sequence. The display prompts the user to make selections using the keypad. The user can scroll through different configure options using the left and right arrows.

6.1.2 Conversion from Sequential to Composite Sampling

Several adjustments must be made to both the Isco Model 3700 Portable Sampler and the Isco Model 3700R Refrigerated Sampler to prepare them for composite sampling. These adjustments are easily reversed to return the sampler to a sequential sampling mode.

6.1.2.1 Conversion of the Isco Model 3700R Refrigerated Sampler

Conversion of the Isco Model 3700R sampler requires the following steps:

1. Remove the sample bottle rack or the bottle locating base.
2. Unscrew the distributor arm nut and remove the distributor arm.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

Category 3

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
9 of 60
January 13, 1992
EMD**

3. **Replace the pump tubing with 40.5-inch composite pump tubing.** Route the tubing into the refrigerator and through the hole in the support bracket. The support bracket is located directly in front of the distributor arm.
4. **Place the composite bottle in the sampler and route the tubing through the hole in the bottle top.**

6.1.2.2 Conversion of the Isco Model 3700 Portable Sampler

Conversion of the Isco Model 3700 Portable Sampler is similar to the procedure described above except that a float cage assembly must be attached to the hole in the distributor shaft, and a composite bottle locating deck must be installed in the sampler base. Conversion of the Isco Model 3700 Portable Sampler requires the following steps:

1. **Remove the sample bottle rack or the bottle locating base.**
2. **Unscrew the distributor arm nut and remove the distributor arm.**
3. **Install the float and float cage.** The shaft on the float should be installed in the hole in the distributor shaft. The float cage is attached to the underside of the center section using the four screws and 1-inch spacers provided with the float cage kit. When attaching the cage, reuse the existing lock washers. The float cage should be aligned so that the tubing guide is facing the pump tubing port.
4. **Feed the 34.5-inch composite pump tubing through the port in the center section.** Feed the tubing into the float cage tube guide.
5. **Insert the locating deck, open side down, in the sampler base.** Reassemble the sampler.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT EMD OPERATING PROCEDURES MANUAL	Manual: Procedure No.: Page: Effective Date: Organization:	5-21000-OPS SW.11, Rev. 1 10 of 60 January 13, 1992 EMD
Category 3		

6.2 OPERATION OF FLOW METERS

See Attachment 8 for a description of the Isco flow meters. Attachment 9 describes the switch and keypad in detail and Attachment 10 describes the internal plotter. Illustration 3 shows an Isco Model 3220 Flow Meter front panel and Illustration 4 shows an Isco Model 3230 Flow Meter side view.

NOTE

The flow meter LCD is used to prompt the user through the set-up program, to display current program parameters, and to display total flow, present flowrate, and level. The display may be viewed through the window on the front door of the flow meter's cabinet when the door is closed. The display is a 2-line, 40-character, dot matrix liquid crystal.

Low Power Indication - When power to the meter falls too low for the unit to operate properly, the message "POWER LOST/LOW BATTERY" will appear on the top line of the display. When power is lost or falls below operating limits, the flow meter will stop accumulating data, and the internal plotter will not print. However, stored data and program parameters entered into memory will be retained by the internal battery-backed RAM.

6.2.1 Programming

The Isco Model 3230 Flow Meter and Model 3220 Flow Meter is programmed with the aid of the dot matrix display. The keypad is used to enter program parameters and to control certain flow meter functions. The display is used to show both menu selections available and selections chosen. The entry selected will flash on the display. The display also indicates operational status and guides the user through the flow-meter programming sequence by showing the step being programmed. Each time a key is pressed an audible signal is emitted. See Attachment 11 for an overview of flow-meter programming and program steps.

NOTE

The following programming sequence is designed for a specific event-related surface-water sampling scheme. Changes other than for this specific programming sequence can be made, and the user is advised to consult the instruction manual referenced in Section 3.0. Enter the program by pressing the "ENTER PROGRAM STEP" key, then select choices from the menus presented on the display.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
11 of 60
January 13, 1992
EMD

Category 3

1.0 1. NORMAL 2. LEVEL ONLY

Select "NORMAL" for operation in the normal mode when a primary flow-measurement device such as a flume or weir is present, then press "ENTER". Otherwise select "LEVEL ONLY" for measurement of water in channels or culverts, then press "ENTER". Selecting "LEVEL ONLY" will result in a request that units of measure be entered. Select "FEET", and the program will then skip to step 2.0.

1.1 SELECT FLOW CONVERSION TYPE 1. STD 2. EQN 3. MANN 4. DATA 5. PROM

Select "STD" for standard flow conversion for flumes and weirs, then press "ENTER".

1.2 ENTER MAX HEAD - RANGE XXXX -XXXX MAX HEAD IN (Units) = XXX (Units)

Select a value for MAXHEAD that is the highest water level that will occur in the given flume or weir (read from top of staff gage). The flow meter's internal resolution is based on this value. (Units = Feet, as selected in step 1.3)

1.3 SELECT UNITS OF LEVEL MEASUREMENTS 1. FEET 2. METERS

Select "FEET", then press "ENTER"

1.4 SELECT FLOW RATE UNITS 1. GPM 2. GPS 3. MGD 4. CFS 5. OTHER

Select "CFS" for cubic feet per second, then press "ENTER".

1.5 SELECT TOTALIZED VOLUME UNITS: 1. CF 2. GAL 3. CM 4. AF 5. L 6. MGAL

Select "CF" for cubic feet, then press "ENTER".

1.6 SELECT TYPE OF STANDARD DEVICE:

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
12 of 60
January 13, 1992
EMD

Category 3

1. WEIR 2. FLUME

Select "FLUME", then press "ENTER". By selecting "FLUME", the program will go to step 1.7.

- 1.7 SELECT TYPE OF FLUME:
1. PAL-BOW 2. PARS 3. TRAP 4. H

Select "PARS" for Parshall flume, or "H" for H flume, then press "ENTER".

- 1.8 SELECT SIZE: 1. 1" 2. 2" 3. 3" 4. 6"
5. 9" 6. 12" 7. 18" 8. 24" 9. 36"

Step 1.8 will be displayed if "PARS" was selected in step 1.7. Select the size of the flume, then press "ENTER". The sizes of flumes for specific locations at RFP can be found in the Work Plan for Event-Related Surface-Water Monitoring and Sediment Characterization (EG&G, 1991a).

- 1.9 SELECT SAMPLER FLOW PACING
1. OFF 2. ENTER FLOW INTERVAL

Because the event-related surface-water monitoring program will usually operate with timed-paced sampling, select "OFF", then press "ENTER".

- 2.0 SELECT SAMPLER CONTROL
1. ENABLE 2. DISABLE 3. ENABLE BY LEVEL

Select "ENABLE BY LEVEL", then press "ENTER".

- 2.1 ENTER LEVEL AT WHICH TO ENABLE SAMPLER:
X.XXX FT

Enter the level desired for sampling initiation. This will cause the sampler to be enabled at and above this level. See the Work Plan for Event-Related Surface-Water Monitoring and Sediment Characterization (EG&G, 1991a) to determine this level.

- 2.2 SELECT PLOTTER ON/OFF WITH SAMP ENAB:

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
13 of 60
January 13, 1992
EMD

Category 3

1. YES 2. NO

Select "YES", then press "ENTER". The plotter will be turned on or off when the sampler is enabled or disabled, respectively. The plotter will not turn off with the sampler until it has printed a time-and-date line on the chart. When stopped, the plotter will print a line similar to: >-----<, which will cross the entire chart. This line alerts the user that the chart generated by the plotter has not been running continuously.

Step 3.0 will be displayed if "NORMAL" was selected in step 1.0,

3.0 SELECT PLOTTER MODE OF OPERATION: 1. OFF 2. LEVEL 3. FLOW

Select "FLOW", and press "ENTER".

Step 4.0 will be displayed if "LEVEL ONLY" was selected in step 1.0

4.0 SELECT PLOTTER MODE OF OPERATION: 1. OFF 2. LEVEL

Select "LEVEL", and press "ENTER".

If "LEVEL" was selected in step 3.0 or 4.0, then step 5.0 will be displayed.

5.0 ENTER PLOTTER FULL-SCALE READING: 100% LEVEL = XX.XXX FT

Enter the 100% level, then press "ENTER". For event monitoring, the 100% level should be equal to the MAX HEAD for the particular primary flow-measurement device or estimated maximum head for the channel or culvert.

If "FLOW" was selected in step 3.0, then step 6.0 will be displayed.

6.0 ENTER PLOTTER FULL-SCALE READING: 100% FLOW = XXXXXX CFS

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
14 of 60
January 13, 1992
EMD

Category 3

Maximum flow will be automatically displayed based on the size of the primary flow-measurement device. Press "ENTER" to accept this value.

- 7.0 SELECT PLOTTER CHART SPEED:
1. .5"/HR 2. 1"/HR 3. 2"/HR 4. 4"/HR

Select ".5"/HR" to conserve plotter paper.

- 8.0 SET: YEAR MONTH DAY HOUR MINUTE
XXXX XX XX XX XX

Enter the current date and time.

- 9.0 ENTER SITE IDENTIFICATION NUMBER:
SITE NUMBER = XXX

Enter the site identification number that will be printed on the chart and may be used for subsequent identification of the chart record. Use the GS designation for the station. For example, if the station is GS03, enter 003.

- 10.0 SELECT AUTO PURGE FREQUENCY
1. OFF 2. 5 3. 10 4. 15 5. 30 6. 60

The units are in minutes. Enter "OFF" for stations operated by batteries and "60" for stations powered from an AC source.

- 11.0 ADJUST LEVEL: UP/DOWN OR VALUE
ENTER PRESENT LEVEL: ±XX.XXX FT

Measure the actual water level in the channel using a staff gage and enter the value, then press "ENTER".

- 12.0 SELECT RESET FLOW TOTALIZER:
1. YES 2. NO

Select "NO", then press "ENTER".

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT EMD OPERATING PROCEDURES MANUAL	Manual: Procedure No.: Page: Effective Date: Organization:	5-21000-OPS SW.11, Rev. 1 15 of 60 January 13, 1992 EMD
---	---	--

Category 3

13.0 REPORT GENERATION 1. ON 2. OFF 3. PRINT

Select "PRINT" for a report printout, then press "ENTER".

13.1 CLEAR REPORT DATA AFTER PRINT: 1. YES 2. NO

If "YES" is selected, the minimum level, maximum level, minimum flow, maximum flow, average flow, and the volume for the period will be cleared and the next report will cover the period from the present to the next regularly scheduled report time.

13.2 REPORT INTERVAL TO BE IN: 1. HOURS 2. DAYS 3. MONTHS

Select "HOURS", then press "ENTER".

13.3 ENTER INTERVAL IN HOURS: XXXX HOURS

Enter "24", then press "ENTER".

13.4 ENTER THE INTERVAL START TIME: YR: YYYY MONTH: MM DAY: DD HR: HH MIN: MM

the current year, month, day. Enter "0000" for hour and "0" for minute, then press "ENTER".

14.0 ENABLE PROGRAM LOCK? 1. YES 2. NO

The programmed parameters can still be viewed, but not altered, when the "LOCK" is enabled (the unlock code number for the flow meter is the model number, 3220 or 3230). If the "LOCK" is enabled, the letter "L" will appear at the right side of the display when the flow meter is operating in the normal mode (displaying level or flowrate). If the user enters the program to make changes, the display will ask for the password (3220 or 3230). After the changes have been installed and the user exits the program, the

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
16 of 60
January 13, 1992
EMD

Category 3

program will lock and the "L" will reappear on the display after about 30 seconds. The "L" will stay off only if "NO" is chosen in step 14.0.

6.2.2 Operation of the BUBBLE RATE ADJUST VALVE (Model 3230 Only)

This valve, located on the right side of the flow meter's case, is a "needle" type valve that controls the rate at which compressed air is bled from the reservoir into the bubble tube and the rate at which the bubbles are released into the flow stream. To operate the BUBBLE RATE ADJUST VALVE:

1. Turn the valve knob counterclockwise to increase the bubble rate.
2. Turn the knob clockwise until it stops completely to shut off the air supply to the bubble line.
3. Set the bubble rate at approximately one (1) bubble per second. For relatively clean flow streams, a bubble rate of one (1) bubble per second will provide the required sensitivity while at the same time minimizing power consumption.
4. Set the bubble rate at approximately two (2) bubbles per second for flow streams with suspended solids (e.g., domestic raw sewage or streams with a high grease content). A bubble rate of two (2) bubbles per second will aid in preventing clogging of the bubble line at the expense of higher power consumption.

NOTE

Do not use anything but fingers to tighten the BUBBLE RATE ADJUST VALVE. The needle and the seat inside the valve are very small and may be damaged or broken if tools or excessive force are used to force the valve when closing it. Once the valve is properly set, do not use excessive force to tighten the hex screw that locks the adjustment knob or either the wrench or hex screw may be stripped.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
17 of 60
January 13, 1992
EMD

Category 3

6.3 MAINTENANCE OF AUTOMATIC SAMPLERS

This section contains procedures for routine, quarterly maintenance of automatic sampling equipment in use at the stream gaging and sampling stations. Information that addresses nonroutine maintenance such as equipment failure or breakage, or other maintenance issues not covered in this section, can be found in the instruction manuals referenced in Section 3.0 of this Operations Procedure.

6.3.1 Cleaning the Sampler

NOTE

Quarterly cleaning of the automatic samplers is an essential part of routine maintenance. Exterior surfaces of automatic samplers should be wiped down every two (2) weeks and more frequently as needed to keep them free of dust and debris. Primary flow-measurement devices (flumes and weirs) should be inspected each time a site is visited, and any debris that is present should be removed.

To clean the sampler:

1. Clean the top cover and sample bottle base. Use a dilute solution of nonphosphate detergent and a soft cloth or sponge.
2. Clean the center section. The center section can be cleaned in a similar manner provided that a power source is connected to the 12 volt (V) direct current (DC) connector and the flow meter connector is tightly capped.
3. Clean the sample bottles thoroughly after each use. These bottles should be cleaned according to procedures detailed in the Operations Procedures Manual 5-21000-OPS-SW.10: Event-Related Surface-Water Sampling (EG&G, 1991b).

NOTE

Pump tubing and suction line will not require cleaning because of the automatic purge capability of the automatic samplers that will condition the tubing prior to the collection of each sample. Water or cleaning solution can be pumped through the tubing to clear

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
18 of 60
January 13, 1992
EMD

Category 3

an obstruction or clean the tubing in a special case. If a cleaning solution is used, the tubing must be rinsed thoroughly before the next sampling event. If the sampling crew has any reason to believe that either the sample tubing or the pump tubing has become contaminated, the tubing should be replaced.

Other information concerning the cleaning of automatic samplers and related equipment can be found in Operations Procedure 5-212000-OPS-FO.03 - General Equipment Decontamination (EG&G, 1991c).

6.3.2 Replacement of the Pump Tubing

NOTE

The constant mechanical strain placed on the tubing by the action of the peristaltic pump, as well as chewing by small mammals such as mice, will eventually cause the tubing to fail. The pump tubing should be inspected periodically for wear inside the pump by removing the cover. The tubing should be inspected for cracks where the pump roller compresses the tubing. The tubing life configure option reports the number of pump counts elapsed during the life of the pump tube.

Removing the Pump Tubing - The following steps should be followed to remove the pump tubing:

1. Disconnect power from the unit.
2. Separate the center section from the rest of the sampler. Turn center section over to access the distributor assembly. (This step is not necessary on the Isco Model 3700R sampler because the distributor assembly can be accessed by opening the door to the refrigerator compartment.)
3. Unscrew the distributor arm retaining nut. Pull arm off of distributor shaft. Do not manually rotate the distributor arm/shaft.
4. Pull the pump tubing out of the distributor arm and coil spring assembly. (Isco Model 3700R samplers are not equipped with a coil spring assembly.)

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
19 of 60
January 13, 1992
EMD

Category 3

5. Pull the tubing out of the pump tubing port in the center section.
6. Remove the outer case of the liquid detector. This is done by loosening the two captivated thumbscrews that fasten the case to the liquid detector housing. Next, pull the tubing away from the detector.
7. Remove the outer pump cover. This is done by loosening the four captivated thumbscrews that fasten the pump cover to the pump housing. This will expose the pump tubing.
8. Extract the tubing from the pump. The pump rollers can be rotated manually to facilitate the removal of the tubing. When the tubing has been removed, thoroughly clean the interior of the pump casing.
9. Remove the suction line, if attached. Loosen the clamp which secures the line to the pump tubing and pull suction line out of pump tubing.

Installing a New Pump Tube - The following steps should be followed to replace the pump tubing:

1. Line up black bands on the new pump tubing. These bands are used to correctly locate the tubing in the detector and pump. Correct placement is critical to prolonging the life of the pump tubing and to assuring efficient operation and accurate sample volumes.

Facing the liquid detector, place the inner edge of the end band against the upper left inlet of the liquid detector. Place the inner band at the lower outlet of the liquid detector.

2. Slip the pump tubing under the pump rollers. Tubing should be situated so that the pump tubing does not interfere with the installation of the outer pump cover.
3. Replace the pump cover and tighten the four thumbscrews.
4. Check the position of the black marker bands. Adjust the tubing if the position of the bands indicate that the tubing has slipped.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
20 of 60
January 13, 1992
EMD

Category 3

5. **Replace the outer cover of the liquid detector.** Secure the cover in place by tightening the two thumbscrews.
6. **Feed the tubing through the pump tubing port in the center section.**
7. **Feed the tubing through the coil spring (Isco Model 3700 only) and distributor arm.** The end of the tubing should be installed flush to the lip protruding 1/16 inch from end of the distributor arm.
8. **Reinstall the distributor arm.** Align the distributor arm on the distributor shaft and screw in the retaining nut. Make sure the retaining nut is tight.
9. **Inspect the length of exposed tubing under the center section.** There should be no excessive slack in this tubing; it should slope continuously downward from the bottom of the center section to the point where it enters the distributor arm. This prevents low spots in the tubing where liquid could pool and prevent complete drainage. Slack can be adjusted by pulling the tubing out of the pump tubing port.
10. **Reinstall the suction line.**
11. **Reset the pump tubing count to zero.** This is done through the Tubing Life configure option (consult the instruction manual referenced in Section 3.0).

6.3.3 Changing the Internal Desiccant

NOTE

A humidity indicator, labeled "INTERNAL CASE HUMIDITY," is located in the lower left corner of the control panel. It indicates the amount of moisture present inside the control box. The paper indicator is blue in a dry state. If moisture accumulates inside the control box, the numbered areas on the indicator will turn light pink or white. The indicator has three sections numbered 20, 30, and 40, indicating the percent humidity in the control box. If the indicator section marked 30 turns white or pink, the desiccant inside must be renewed or replaced.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
21 of 60
January 13, 1992
EMD

Category 3

To change the internal desiccant:

1. **Unscrew the screws located around the outer rim of the control box bezel, and lift the bezel and cover off the control box.**
2. **Replace or renew the three bags of desiccant . The desiccant bags can be renewed by placing them in an oven at 250°F for 16 hours.**
3. **Inspect the control box for leaks while it is open. If a leak is found, it can be repaired by following procedures detailed in the Isco Model 3700 Portable Sampler Instruction Manual, (Isco, Inc., 1990d, Sec. 6.5 and 6.7), or by returning the control box to the factory.**
4. **Coat the cover gasket with a thin film of silicone grease.**
5. **Reseal the control box.**
6. **Tighten the screws that fasten the control box cover using an even cross-torquing pattern.**

6.3.4 Charging the Nicad and Lead-Acid Battery Packs

The Isco Model 3700 and Model 3700R samplers may be supplied with nickel-cadmium (nicad) and lead-acid battery packs as primary power supplies for sampling and gaging stations without an AC power source, or as secondary "backup" supplies in case of AC power failure.

NOTE

Both the Isco Model 3700 and the Model 3700R samplers can be powered from an Isco AC Power Pack, from an Isco Nicad Battery Pack, or from an external 12 V DC Lead-Acid battery. The power pack may also be used to charge the batteries.

The following sections describe the use and changing of the nicad and lead-acid batteries.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Category 3

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
22 of 60
January 13, 1992
EMD

6.3.4.1 Charging

CAUTION - CHARGING

The nicad battery pack should only be charged with an Isco Power Pack, Battery Charger, or Five Station Battery Charger. All will supply the proper DC charging current to the battery when they are connected to an AC power source. Chargers designed for lead-acid batteries, such as automotive or gelled-electrolyte types, are not satisfactory because their open-circuit voltage is generally not high enough to fully charge a nicad battery; consequently they are not recommended.

The lead-acid batteries should be charged with an Isco AC Power Pack. The AC Power Pack will supply a regulated DC charging current to the lead-acid battery when connected to an appropriate AC line source. The charge level of the lead-acid battery can be determined by measuring the output voltage. A chart is provided on the side of the battery that lists the level of charge and time required to recharge for various output voltages.

CAUTION - OVERCHARGING

Overcharging the battery causes it to overheat, gradually breaking down separator material inside the battery. Repeated overcharging will reduce the useable life of the battery and should be avoided. If an Isco Power Pack is used, the battery may be overcharged occasionally with little loss of capacity.

To charge a battery:

1. Connect the plug on the battery cable to the mating receptacle on the power pack or to the connector on the battery charger.
2. Plug the power pack or five station battery charger into any standard 110-V grounded wall outlet.

See Attachment 12 for more information regarding charging nicad and lead-acid packs.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
23 of 60
January 13, 1992
EMD

Category 3

6.3.4.2 Fuse Replacement

If the internal fuse link is blown, the battery fuse will have to be replaced by performing the following:

1. Remove the four screws holding the battery cover.
2. Remove the cover. This will expose the blown fuse link and battery wires. The fuse is a two-inch length of #22 AWG copper wire; this wire is available from Isco.
3. Cut away the ends of the blown fuse wire.
4. Solder in a new link where the old wire was attached.
5. Insulate with tape or shrink tubing.
6. Replace the cover. Be careful to place the cord strain relief ferrule just inside the case so that the cord may not be accidentally pulled out.

6.4 MAINTENANCE OF FLOW METERS

This part of the Operations Procedure provides detailed instructions on the care and routine maintenance necessary to keep the flow meter in top operating condition.

NOTE

Primary flow-measurement devices (flumes and weirs), channels, and culverts should be inspected each time a site is visited and any debris that is present should be removed.

6.4.1 Care of the Flow-Meter Case

If the lid is tightly latched and the Military Standard (M/S) connectors on the side of the case are tightly capped, the case may be cleaned by performing the following:

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
24 of 60
January 13, 1992
EMD

Category 3

1. Spray the case with a hose or wash it with soapy water.

NOTE

Do *not* use a hose with a nozzle or a high pressure hose-and-wand such as is found at car washes. Do *not* immerse the flow meter in a tank of water to wash it. While designed to withstand accidental submersion in water, should that occur, the flow meter is not intended for routine submersion.

6.4.1.1 Care of the Case Seal

The case seal should be inspected and cleaned when necessary by performing the following:

1. Inspect the ridge that extends around the edge of the back half of the flow meter cabinet. This ridge forms a seal with the groove in the cabinet door and should be free of dirt, sand, etc.
2. Wipe the above described ridge carefully with a damp cloth if it isn't clean.
3. Clean the rubber gasket in the lid. It may be cleaned with a small brush and a damp cloth.

NOTE

If any of these cleaning procedures are performed while the case is open, be careful not to allow any dirt or debris to fall inside the flow-meter case. It is best to work on the flow meter with the case standing upright. If the seals are not properly maintained, they may leak, causing damage and eventual failure of the components inside.

6.4.1.2 Preventing Moisture Damage

To prevent moisture damage to internal components, the following steps must be observed:

1. Tightly latch the lid at all times. Open the case lid only when it is necessary to access the front panel to change the program or change the paper roll.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
25 of 60
January 13, 1992
EMD

Category 3

2. Inspect weekly and recharge the desiccant canister as necessary.
3. Keep the external connectors clean by keeping the mating connectors of the protective caps tightly screwed down.
4. Under severe operating conditions, spray the *threads* of the connectors with a cleaner/lubricant (such as JIF™ manufactured by GC Electronics or WD-40™ manufactured by the WD-40 Company) to prevent corrosion. Be careful not to spray any of the conductive terminals (pins or jacks) *inside* the connectors; residue from the sprays could cause intermittent or failed contacts.

NOTE

Do *not* routinely operate the flow meter with the case open. Doing so will expose the internal components to dirt and moisture; it will also cause the desiccant canister inside the case to be prematurely spent.

6.4.2 Reactivation of the Desiccant

NOTE

Both Isco flow-meter models are equipped with a reusable desiccant canister attached by two thumbscrews to the inside of the flow meter's lid and two tubular desiccant cartridges mounted on the right side of the case next to the connectors. The canister contains silica gel that adsorbs moisture trapped inside the flow meter's case when it is closed, keeping the inside of the case completely dry during shipment, storage, and use. If the case is left open, the desiccant will adsorb moisture from the surrounding air. Eventually, its adsorption capacity will be reached, and it will no longer be able to protect the internal components of the flow meter.

6.4.2.1 Checking and Regenerating the Internal Case Desiccant

1. Inspect the desiccant canister each time the case is opened. The desiccant canister has a window on its side that looks blue when the desiccant is in good condition. As the desiccant adsorbs moisture, the window will turn pink. When the

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Category 3

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
26 of 60
January 13, 1992
EMD

window is pink, the desiccant needs to be regenerated or replaced with the spare canister provided in the flow meter's accessory package.

2. Remove the canister from the flow meter by first loosening the two thumbscrews which hold the canisters mounting bracket down.
3. Remove the canister from the mounting bracket.
4. Heat the canister in a vented oven at 300°F (150°C) for about three hours or until the blue color returns. Do *not* use a microwave oven.
5. Reinstall the canister in the flow meter after cooling. Make sure the window on the side of the canister remains visible.

6.4.2.2 Regenerating the External Desiccant Cartridges

NOTE

The external desiccant cartridges may be inspected at the same time as the internal desiccant canister, or whenever the flow meter's battery is changed. As long as the color is blue the desiccant is "safe" and need not be regenerated. The cartridges will first begin to turn pink at one end of the plastic tubing as water is adsorbed. As time passes, the pink color will spread through the rest of the desiccant until eventually, the cartridges will become pink throughout their length. Before either cartridge has changed color completely, the desiccant should be regenerated.

To regenerate either or both cartridges:

1. Snap the cartridges out of the brackets which hold them attached to the flow meter's case, one at a time.
2. Gently detach the silicone tubing from the top of each cartridge.
3. Pull one of the end caps off the cartridge.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
27 of 60
January 13, 1992
EMD

Category 3

4. Pour the spent desiccant into a small metal pan or some other container.
5. Refill the cartridge with the extra desiccant provided.
6. Replace the end caps. Note the cotton filters in the end caps. These are to prevent small pieces of the desiccant material falling out of the cartridge. These filters should be replaced periodically using ordinary surgical cotton balls.
7. Regenerate spent desiccant by placing the particles in a shallow layer in the bottom of a small metal pan.
8. Heat at 400°F (200° to 225°C) in a clean atmosphere for one to two hours, or until the blue color returns.

6.4.3 Bubble Line Maintenance (Model 3230 Only)

The bubble line on the Isco Model 3230 should be periodically inspected to make sure that is not kinked, frayed, cut, nicked, or otherwise damaged. If the bubble line is found to be damaged, it should be replaced. A leaky or obstructed line may cause erroneous level readings and/or decreased battery life as a result of the pump having to run more frequently. If it becomes necessary to replace the bubble line, a new bubble line may be installed.

The outlet of the bubble line should be inspected periodically to ensure that it has not become obstructed due to accumulation of foreign material or organic growth. If the line is found to be obstructed, it should be cleaned or the tip may simply be cut off. If clogging of the outlet of the bubble line proves to be a continuing problem, it may be desirable to use a bubble line with a larger inside diameter. However, it is usually preferable to increase the frequency of the automatic purge operation (see the following note) to increasing the size of the bubble line. Consult the factory for specific recommendations regarding the size of the line, special connectors required, etc.

NOTE

The Isco Model 3230 is equipped with an automatic purge feature to clear the bubble line with a discharge of air from the pump periodically. This may be useful as an aid in keeping the outlet of the bubble line clean. The program step SELECT PURGE INTERVAL

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT EMD OPERATING PROCEDURES MANUAL	Manual: Procedure No.: Page: Effective Date: Organization:	5-21000-OPS SW.11, Rev. 1 28 of 60 January 13, 1992 EMD
Category 3		

allows the user to establish the interval between purge cycles, which ranges from five minutes to one hour. The purge button on the flow meter's front panel keypad also allows the user to purge the bubble line at any time by pressing the button, thus not having to wait until the next programmed purge cycle occurs to purge the line. Operation of the purge can readily be identified by the sound of the pump running inside the flow meter. The pump will continue to run for as long as the button is pressed, and for a few seconds after the button is released.

6.4.4 Maintenance of the Internal Plotter

The internal plotter will be used under normal RFP operations and requires little periodic maintenance beyond changing the paper roll and changing the ink ribbon.

6.4.4.1 Changing the Paper Roll

NOTE

Refer to the illustration inside the front of the cabinet on the Isco Model 3220 and Model 3230. The roll of paper should be changed when it runs out, as the internal plotter will shut down when there is no paper in it. The end of the roll is near when a 1-inch pink band appears on the left side of the chart.

To change the roll of paper:

1. Locate the handle on the left side of the take-up roll.
2. Pull gently, but firmly, straight out on this handle until the take-up roll assembly comes off of the internal plotter mechanism.
3. Remove the roll from the take-up spool by holding the handle and gear of the take-up spool in the left hand while pulling the paper roll off the spool with the right hand.
4. Remove the feed spool by pulling gently on the handle protruding from the right side of the internal plotter assembly.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
29 of 60
January 13, 1992
EMD

Category 3

5. Remove the spent roll from the spool by holding the handle in the right hand and pulling the roll from the spool with the left hand.

6.4.4.2 Installing a New Paper Roll

After the spent roll has been removed:

1. Slide the new roll onto the feed spool so that it unrolls from the back side, facing away. Do this by lining up the slots in the cardboard tube with the raised guides on the feed spool.
2. Peel the paper back gently so that it will unroll freely.
3. Using a knife or scissors, cut the end off the roll if it is torn; then fold it over on itself so that the end is straight and a little stiffer than a single thickness of paper would be.
4. Unroll a few inches of the paper and set the roll on the top of the flow meter's cabinet.
5. Feed the paper down the back of the internal plotter with fingers to where it touches the roller. Make sure the paper gets past the lever for the paper sensing switch.
6. Press the CHART ADVANCE key and hold it down until the paper is fed through the internal plotter mechanism.

6.4.4.3 Re-threading the Paper

When the new paper has come through the internal plotter:

1. Reinsert the feed spool with the new roll on it into the internal plotter assembly.
2. Run a few inches through the internal plotter, using the CHART ADVANCE key.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
30 of 60
January 13, 1992
EMD

Category 3

3. Unfold the end that was folded over on the take-up spindle.
4. With a small piece of tape, tape the end of the new paper to the cardboard tube from the old roll.
5. Roll some of the paper onto the spool so that it will wind clockwise, facing away.
6. Re-insert the take-up roll into the top of the internal plotter. Be careful to push it all the way back in, so that the take-up gear on the end of the spool assembly will re-engage.
7. When the take-up spool is back in place, again push the CHART ADVANCE key; this will remove any slack in the paper.

6.4.4.4 Ink Ribbon Replacement

NOTE

It is difficult to predict how long an ink ribbon will last, as the frequency of use of the internal plotter and report generator will vary from one installation to another. However, after a long period of operation and when the characters printed on the chart start to become faint, the ink ribbon should be replaced. Whenever possible, ink ribbon replacement should be performed at the same time the roll of paper is replaced, as it is easier to replace the ink ribbon when the roll of paper is out of the way. Refer to the illustration inside the front of the cabinet on the Isco Model 3220 and Model 3230.

To replace the ink ribbon:

1. Turn the unit off.
2. If there is still paper in the unit, remove the take-up spool and unroll enough paper to get it out of the way so that the two ink ribbon spools can be clearly seen. Each spool has a ribbon-detecting lever pressing against the ink ribbon. Note the direction in which the ink ribbon comes off the left spool and how it goes back onto the right spool.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
31 of 60
January 13, 1992
EMD

Category 3

3. Grasp one of the spools and rotate it slightly, loosening the ink ribbon.
4. Lift gently until the spool comes free from its shaft. Do the same thing with the other spool.
5. Lift the chart and take-up spool out of the way.
6. Remove the ink ribbon from around the printer mechanism, noting how it is threaded through.
7. Place the new ink ribbon around the printer mechanism.
8. Locate the three small pins on each spool of the ink ribbon.
9. Turn the spools so the pins face the gears on the two ribbon shafts.
10. Replace the two spools on their respective shafts, pushing the detector levers out of the way so that spools will easily re-engage their gears.
11. Gently rotate each spool to tighten the ink ribbon.
12. Reinstall the paper take-up roll if necessary. The procedure outlined above will also be followed if the roll of paper is being replaced.

6.4.5 Charging the Nicad Battery Pack

NOTE

The Isco Model 3220 and Model 3230 Flow Meters may be powered from an Isco sampler, from an Isco AC Power Pack, from an Isco Nicad Battery Pack, or from an external 12 VDC battery that may be recharged by an ordinary automotive battery charger or by solar panels. The power pack may also be used to charge the battery.

The following sections describe the use and charging of the nicad battery and nicad fuse replacement.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
32 of 60
January 13, 1992
EMD

Category 3

6.4.5.1 Charging

CAUTION - CHARGING

The nicad battery pack should only be charged with an Isco Power Pack, Battery Charger, or Five Station Battery Charger. All will supply the proper DC charging current to the battery when they are connected to an AC source. Chargers designed for lead-acid batteries, such as automotive or gelled-electrolyte types, are not satisfactory because their open-circuit voltage is generally not high enough to fully charge a nicad battery; consequently they are not recommended.

CAUTION - OVERCHARGING

Overcharging the battery causes it to overheat, gradually breaking down the separator material inside the battery. Repeated overcharging will reduce the useable life of the battery, and should be avoided. If an Isco Power Pack is used, the battery may be overcharged occasionally with little loss of capacity.

To charge a battery:

1. Connect the plug on the battery cable to the mating receptacle on the power pack or to the connector on the battery charger.
2. Plug the Isco Power Pack or Isco Five Station Battery Charger into any standard 110-V grounded wall outlet.

See Attachment 12 for more information regarding the charging nicad and lead-acid packs.

6.4.5.2 Fuse Replacement

If the internal fuse link is blown, the battery fuse will have to be replaced by performing the following:

1. Remove the four screws holding the battery cover.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
33 of 60
January 13, 1992
EMD

Category 3

2. Remove the cover. This will expose will the blown fuse link and battery wires. The fuse is a 2-inch length of #22 AWG copper wire; this wire is available from Isco.
3. Cut away the ends of the blown fuse wire.
4. Solder in a new link where the old wire was attached.
5. Insulate with tape or shrink tubing.
6. Replace the cover. Be careful to place the cord strain relief ferrule just inside the case so that the cord may not be accidentally pulled out.

6.5 FLOWLINK SOFTWARE DATA TRANSFER

NOTE

A laptop computer with Isco FLOWLINK software is required for the retrieval of data other than the printed data produced from the internal printer/plotter. Data must be collected periodically to avoid losing data. If a memory partition is filled, past collected data is erased as new data replaces the oldest entries.

This section only considers data retrieval when a laptop computer is used at each flow-meter site and the flow meter is connected to the laptop with a serial cable. The computer retrieves the data from the flow meter's memory and transfers it to the hard drive. The flow meter should be partitioned for flow and sampling data prior to data collection. For more information on partitioning and the use of FLOWLINK software, consult the FLOWLINK Instruction Manual (Isco, Inc., 1991e).

To transfer collected flow data from Isco Model 3220 and Model 3230 flow meters to a laptop computer:

1. Attach the 6-pin connector end of the flow meter interrogator cable to the flow meter's interrogator connector.
2. Attach the 4-pin connector end of the flow meter interrogator cable to the mating 4-pin connector end of the serial port cable. Tighten the connector bushing securely.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
34 of 60
January 13, 1992
EMD

Category 3

3. Attach the rectangular connector end of the serial port cable to the laptop computer's serial port. The serial port may have a 9 or 25 pin connector, depending on the computer.
4. Turn the laptop computer on.
5. Type FLOWMENU at the computer prompt. This will display the Main menu.
6. Select LAPCOMM from the Main menu with the arrow keys and press ENTER. This will display the Lapcomm Base menu.
7. Select CONNECT with the arrow keys and press enter. This will display the Connect menu.
8. Select INTERROGATE with the arrow keys and press enter. This will display the Interrogate menu.
9. Select ALL with the arrow keys from the Interrogate menu and press enter. All partitions (flow meter and sampler) will be Interrogated.
10. Wait for the interrogation to be completed. This usually takes 3 to 5 minutes depending on the amount of data to be retrieved. Computer will inform the user when this is completed.
11. Select QUIT from the menu with the arrow keys and press ENTER.
12. Repeat step 11 until out of FLOWLINK.
13. Turn the computer off.
14. Remove the cables linking the computer with the flow meter.

6.6 DOCUMENTATION

NOTE

The flow meter's Internal Plotter provides a "hard copy" of total flow, level, or flow-rate variation over time and provides sampling information and a printout of the selections

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
35 of 60
January 13, 1992
EMD

Category 3

programmed into the flow meter's memory. The plotter also generates reports. All chart markings and characters are generated by the internal plotter on a chart of plain white paper. See Attachment 13 for an example report printed by the Isco Model 3230 or Model 3230 Flow Meter.

Field crews should record summary information of daily activities in the Field Activity Daily Log. The Field Activity Daily Log narrative should create a chronological record of the sampling crew's activities, including the date and time each site is visited. Descriptions of the sampling and stream gaging activities at each station, problems encountered, deviations from this Operations Procedure, and the number of Field Activity Daily Log sheets used to record sampling and stream gaging crew activities for a given day will also be included. Other information concerning documentation of field activities can be found in 5-21000-OPS-SW.10 - Event-Related Surface-Water Sampling (EG&G, 1991b) and 5-21000-OPS-FO.02 - Field Document Control (EG&G, 1991c).

7.0 DISPOSITION

Authentication of the completion of this procedure is documented by signing the last page of the field activity daily log entry for each day.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

Category 3

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
36 of 60
January 13, 1992
EMD**

ATTACHMENT 1 AUTOMATIC SAMPLER DESCRIPTION

The automatic sampling equipment that will be used in the event-related surface-water monitoring program will consist of the Isco Model 3700R Refrigerated Sampler and the Isco Model 3700 Portable Sampler. Details of this program are presented in the document referenced in Section 3.0 of this Operations Procedure. These samplers are both versatile programmable samplers that can be used in conjunction with flow measuring devices. Both samplers can be operated in either sequential or composite mode and can be programmed to sample at intervals based on either flow increments or time increments. Both devices are also capable of multiplex sampling. Multiplexing places more than one sample in a bottle for different sampling events or places a sample in several bottles for the same sampling event.

Both the Isco Model 3700R Refrigerated Sampler and the Isco Model 3700 Portable Sampler consist of three units: the top cover, the center section, and the base section. The removable cover protects the control box mounted on the center section. The center section includes the control box, liquid detector, pump, and distribution system. The sample base on both models houses the sequential or composite bottles. The Model 3700R base is a rectangular refrigerated unit, and the base of the Model 3700 is a cylindrical insulated compartment that can accommodate ice for sample cooling but that has no integral refrigeration system.

The controller on both samplers is housed in the watertight control box mounted on the top of the center section. The controller runs the pump, moves the distributor arm, responds to the keypad, and presents information on the display. The controller provides for manual control of the sampler.

The control panel on both samplers contains a 40-character alphanumeric LCD and a keypad and is located on top of the control box. The 24-position keypad is used to enter program parameters and direct various

Composite sampling will be the predominant mode of sampling during the event-related surface-water monitoring program. Sequential sampling will be performed to a lesser extent. Most sampling performed as part of this program will be based on time increments rather than flow increments. This document outlines procedures for composite and sequential sampling based on uniform time increments. Information regarding other sampling modes or any other general information not covered in this Operations Procedure can be found in the instruction manuals for the automatic samplers (Isco, Inc., 1990c; 1990d).

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
37 of 60
January 13, 1992
EMD

Category 3

ATTACHMENT 2 AUTOMATIC SAMPLER OPERATION

The automatic samplers have three operating states: the "standby" state in which the sampler is awaiting instruction, the "run" state in which the sampler is running a sampling routine, and the "interactive" state that is used to program the sampler. In most cases, the samplers will be in standby mode when the sampling crew arrives at the site. Crews will use the interactive state when preparing the sampler for the next event.

When the sampler is in the standby state it is awaiting instructions. From standby, one can start or resume a sampling program, access the program or configure sequences, take manual samples, and use the DISPLAY STATUS key to review program settings or the results of a sampling routine. When a sampler is first turned on, it will "wake up" in the standby state.

A sampler in standby uses a number of displays to communicate its status. Some of these displays are associated with the function of a specific key; other displays are used to notify the user that a sampling program has been completed, was halted, or has encountered a problem. The STANDBY display simply informs the user that the sampler is in standby and gives the current time and date. Keys that are operable at this point are: ON/OFF, PUMP REVERSE, PUMP FORWARD, START SAMPLING, MANUAL SAMPLE, NEXT BOTTLE, DISPLAY STATUS, and ENTER/PROGRAM. For information concerning the function of each of these keys as well as other displays that may be encountered in standby mode, consult the Isco Model 3700 Instruction Manual (Isco, Inc., 1990d, Section 4.3).

The sampler in the run state is executing the sampling routine according to the settings that were entered in the program and configure sequences. The samplers can be placed in the run state by pressing the START SAMPLING key. During the event-related surface-water monitoring program, the run state will be activated by an enable signal from the accompanying flow-measurement device. For information concerning the various displays that may be encountered during the run state, consult the Isco Model 3700 Instruction Manual (Isco, Inc., 1990d, Section 4.4).

The interactive state allows a user to program the sampler. The interactive state consists of two branches, the program sequence and the configure sequence. The program sequence is used to define the sampling routine; it allows the user to enter the interval between samples, the number of samples to be placed in each bottle, the sample size, and the start time. There are two programming modes, basic and extended. The basic mode is used for conventional sampling routines and the extended mode allows the programming of more complex sampling routines such as nonuniform time intervals. The configure sequence allows the user to choose different setup options such as equipment specifications and basic or extended programming.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
38 of 60
January 13, 1992
EMD**

Other options accessible through the configure sequence allow the user to set the sampler's "real-time" calibration, calibrate the sampler, and enable the password program protection or the master/slave operations.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
39 of 60
January 13, 1992
EMD

Category 3

ATTACHMENT 3 AUTOMATIC SAMPLER KEYPAD FUNCTIONS

Control Keys

Control keys allow you to turn the sampler on or off, start or resume the currently entered program, and control the sampler manually. The functions of the control keys are listed below.

ON/OFF - Pressing the ON/OFF key when the sampler is off will turn the sampler on, reactivate the display and place the sampler in the standby state. Pressing the ON/OFF key (when the sampler is on) will halt all sampling activity and clear the display.

PUMP FORWARD - While in the standby state, pressing the PUMP FORWARD key will cause the pump to run continuously in the forward direction. The pump will run until the STOP key is pressed.

PUMP REVERSE - While in the standby state, pressing the PUMP REVERSE key will run the pump continuously in reverse. The pump will continue to operate until the STOP key is pressed.

STOP - The STOP key will stop the pump any time it is running. When the STOP key is pressed in the run state, the sampling routine will be halted, the sampler will be transferred to the standby state, and the "PROGRAM HALTED" message will be displayed. Pressing the STOP key while in the interactive state will access the display's reference number.

START SAMPLING - When in the standby state, pressing the START SAMPLING key will begin the sampling program.

RESUME SAMPLING - When "PROGRAM HALTED" is displayed, pressing the RESUME SAMPLING key will cause the sampler to continue with the current sample program at the point at which it was halted.

MANUAL SAMPLE - Pressing the MANUAL SAMPLE key will allow you to take a manual sample. The MANUAL SAMPLE key is valid in the standby state, the run state, and when calibrating the sampler.

NEXT BOTTLE - Pressing the NEXT BOTTLE key will cause the distributor to move to the next bottle. If the distributor is positioned over the last bottle, it will move to bottle position 1.

Program Keys

The four program keys are used to enter program settings. Each key's function is listed below.

DISPLAY STATUS - While the sampler is in the standby or run state, pressing the DISPLAY STATUS key will allow you to view the program settings or the sampling results.

EXIT PROGRAM - Pressing the EXIT PROGRAM key while in the program sequence will return the sampler to standby. Pressing the EXIT PROGRAM key while in the run state will halt the program; the message "PROGRAM HALTED" will be displayed.

CLEAR ENTRY - When entering a number, the CLEAR ENTRY key can be used to return to the original entry.

ENTER/PROGRAM - Pressing the ENTER/PROGRAM key, while in the standby state, will cause the sampler to enter the interactive state. While at an input display, pressing the ENTER/PROGRAM key will accept an entered value or a blinking option, and direct the sampler to proceed to the next step. Input displays are discussed in section 4.2.2.1.2

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
40 of 60
January 13, 1992
EMD**

ATTACHMENT 4 AUTOMATIC SAMPLER TIME-PACED SEQUENTIAL SAMPLING

Step No.	Display	Procedure
1	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> ... STANDBY ... 5:34:50 4/19/90 </div>	If the sampler is not already on, press the ON/OFF key to turn it on. The standby display shown here will appear. Press ENTER/PROGRAM to access the interactive state.
2	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> [PROGRAM, CONFIGURE] SAMPLER </div>	Access the program sequence by selecting "PROGRAM." Because the choice "PROGRAM" will already be selected (blinking), press the ENTER/PROGRAM key to accept it and move to the next step.
3	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> [TIME, FLOW] PACED SAMPLING </div>	To enter the interval between samples in time increments, select "TIME." If the choice, "TIME," is already blinking, press the ENTER/PROGRAM key to accept the selection. If the choice, "FLOW," is blinking; press the LEFT ARROW key once so that the choice "TIME" blinks. Then, press the ENTER/PROGRAM key to accept "TIME."
4	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> SAMPLE EVERY 0 HOURS, 1 MINUTES </div>	This display requires two entries; one for the hours, one for the minutes. Enter "0" to set the hours at zero. Press ENTER/PROGRAM to accept the number "0" and move to the minutes entry shown in step 5.
5	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> SAMPLE EVERY 0 HOURS, 30 MINUTES </div>	Enter "30" to set the minutes entry to 30. Press ENTER/PROGRAM to accept the entry.
6	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> MULTIPLEX SAMPLES? [YES, NO] </div>	For the purposes of this example, select "NO." Press the ENTER/PROGRAM key to accept the entry. If you select "YES" in response to this question, you would be able to select bottles-per-sample or samples-per-bottle multiplexing for your routine.
7	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> SAMPLE VOLUMES OF 250 ml EACH (10 - 990) </div>	Enter "250" to set the sample volume at 250 ml. Press the ENTER/PROGRAM key to accept the entry.
8	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> ENTER START TIME? [YES, NO] </div>	Because this sampling routine does not require a specific start time, use the arrow keys to select "NO." Press the ENTER/PROGRAM key to accept the entry. If you select "YES," you would be able to enter a specific start time and date for the routine.
9	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> PROGRAMMING SEQUENCE COMPLETE ... </div>	After this message is displayed briefly, the sampler will automatically return to the standby state.
10	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> ... STANDBY ... 5:42:23 4/19/90 </div>	After the sampler is properly installed, press the START SAMPLING key to run the program.
11	<div style="border: 1px solid black; padding: 2px; width: fit-content;"> START SAMPLING BOTTLE 1 (1-24) </div>	To start the sampling routine with the first bottle, accept the blinking "1" by pressing the ENTER/PROGRAM key. If you want to start the routine with another bottle, enter the starting bottle number here.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
41 of 60
January 13, 1992
EMD**

Category 3

ATTACHMENT 4 AUTOMATIC SAMPLER TIME-PACED SEQUENTIAL SAMPLING (CONT.)

	Run State Displays	Comment
12	<pre> BOTTLE 1 AT 5:44 5:42:33 </pre>	This display appears as the sampler counts down the time remaining to the start time. The first line reports the bottle which will receive the next sample volume. The second line reports the start time at the left and the current time on the right.
13	<pre> BOTTLE 1 </pre>	When the start time arrives, the sampler will take the first sample. The sample event cycle begins with a pre-sample purge. During the purge, the display indicates the bottle number which will receive the sample volume.
	<pre> BOTTLE 1 PUMPING 250 ml </pre>	As soon as the pump runs forward to deliver the sample volume, the message on the second line appears. This message remains through the post-sample purge.
14	<pre> BOTTLE 2 AT 6:14 5:45:11 </pre>	This display appears when the post-sample purge from the previous sample event is completed. It indicates the bottle number which is to receive the sample at the upcoming sample event. The second line displays the scheduled time for the next event on the left. The current time is displayed on the right.
15	<p>↓ ↓</p>	The cycle of displays, illustrated in steps 12 through 13, is repeated for each bottle until the sampling routine is done.
16	<pre> DONE . . . 24 SAMPLES 6:10:35 4/21/90 </pre>	When the routine is completed, this message appears. It reports the status of the routine ("DONE"), the total number of sample events, and the current time and date.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
42 of 60
January 13, 1992
EMD**

ATTACHMENT 5 AUTOMATIC SAMPLER TIME-PACED COMPOSITE SAMPLING

Step No.	Display	Procedure
1	... STANDBY ... 10:34:50 4/19/90	If the sampler is not already on, press the ON/OFF key to turn it on. Press ENTER/PROGRAM to access the interactive state.
2	[PROGRAM, CONFIGURE] SAMPLER	Access the configure sequence by selecting "CONFIGURE."
3	SELECT OPTION: (← →) SET CLOCK	Press the LEFT ARROW or RIGHT ARROW key to scroll through the configure options until the Bottles and Sizes configure option appears.
4	SELECT OPTION: (← →) BOTTLES AND SIZES	To access the Bottles and Sizes settings, press the ENTER/PROGRAM key.
5	[PORTABLE, REFRIG.] SAMPLER	Select "PORTABLE."
6	[1, 24] BOTTLES	Select "1" for single bottle composite sampling.
7	BOTTLE VOLUME IS 18000 ml	Enter the bottle size here, "15000." (Table 4.2-2 lists the standard Isco bottle sizes.)
8	SELECT OPTION: (← →) SUCTION LINE	Press the ENTER/PROGRAM key at this display to access the Suction Line input displays.
9	SUCTION LINE ID IS [1/4, 3/8] INCH	Select "1/4" if you are using 1/4 inch suction line, "3/8" if you are using 3/8 inch suction line.
10	SUCTION LINE IS [VINYL, TEFLON]	This display appears when you have selected "3/8" in step 9. Select "VINYL" if you are using vinyl suction line, "TEFLON" if you are using Teflon® suction line.
11	SUCTION LINE LENGTH IS 10 FEET (3 - 99)	Enter the length of the suction line. The length should not include the tube coupling or the strainer.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
43 of 60
January 13, 1992
EMD**

Category 3

ATTACHMENT 5 AUTOMATIC SAMPLER TIME-PACED COMPOSITE SAMPLING (CONT.)

Step No.	Display	Procedure
12	SELECT OPTION: (← →) LIQUID DETECTOR	To verify the Liquid Detector configure options, press the ENTER/PROGRAM key.
13	↓ ↓	Continue to scroll through the configure options with the RIGHT ARROW key. When you have checked the settings for the desired options, press the EXIT PROGRAM key to return to standby.
14	... STANDBY ... 10:38:50 4/19/90	Press the ENTER/PROGRAM key to reenter the interactive state.
15	[PROGRAM, CONFIGURE] SAMPLER	Access the program sequence by selecting "PROGRAM."
16	[TIME, FLOW] PACED SAMPLING	Select "TIME."
17	SAMPLE EVERY 0 HOURS, 1 MINUTES	Enter "0" to set the hours at zero. Press ENTER/PROGRAM to store the number "0" and move to the minutes entry.
18	SAMPLE EVERY 0 HOURS, 15 MINUTES	Enter "15" to set the minutes entry to 15.
19	48 COMPOSITE SAMPLES (0-200)	Enter the number of samples to be collected: "48."
20	SAMPLE VOLUMES OF 250 ml EACH (10 - 310)	Enter the sample volume: "250." Note that the upper limit of the range of acceptable volumes has been adjusted. When 48 samples are to be collected, the maximum sample volume is 310 ml. If you need to use a larger sample volume, you would need to adjust the sample number downward.
21	ENTER START TIME? [YES, NO]	Select "YES" to enter the start time for the routine.
22	TAKE FIRST SAMPLE AT 6:00 4/20	Enter the start time and date: "6:00" on "4/20."
23	PROGRAMMING SEQUENCE COMPLETE ...	After this message is displayed briefly, the sampler will automatically return to the standby state.
24	... STANDBY ... 10:40:23 4/19/90	After the sampler is properly installed, press the START SAMPLING key to run the program.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
44 of 60
January 13, 1992
EMD**

Category 3

ATTACHMENT 5 AUTOMATIC SAMPLER TIME-PACED COMPOSITE SAMPLING (CONT.)

Run State Displays	Comment		
25 <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">SAMPLE 1 OF 48</td> </tr> <tr> <td style="padding: 2px;">AT 6:00 5:50:43</td> </tr> </table>	SAMPLE 1 OF 48	AT 6:00 5:50:43	The first line of this display indicates the number of the upcoming sample event and the total number of programmed samples. The second line indicates the scheduled time of the upcoming event followed by the current time.
SAMPLE 1 OF 48			
AT 6:00 5:50:43			
26 <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">SAMPLE 1 OF 48</td> </tr> </table>	SAMPLE 1 OF 48	When the time to the next sample event has elapsed and the sampler has initiated the sample event, the sampling cycle begins.	
SAMPLE 1 OF 48			
<table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">SAMPLE 1 OF 48</td> </tr> <tr> <td style="padding: 2px;">PUMPING 250 ml</td> </tr> </table>	SAMPLE 1 OF 48	PUMPING 250 ml	When the pump reverses for the pre-sample purge, the second line disappears. At the end of the pre-sample purge, the pump runs forward to deliver the sample, and the second line appears on the display. This display remains through the end of the post-sample purge.
SAMPLE 1 OF 48			
PUMPING 250 ml			
27 <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">SAMPLE 2 OF 48</td> </tr> <tr> <td style="padding: 2px;">AT 6:15 6:00:33</td> </tr> </table>	SAMPLE 2 OF 48	AT 6:15 6:00:33	At the end of the sample event, the display changes to indicate the number and time of the next event. The current time is reported in the lower right corner.
SAMPLE 2 OF 48			
AT 6:15 6:00:33			
28 <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">SAMPLE 2 OF 48</td> </tr> </table>	SAMPLE 2 OF 48	The cycle is repeated for the remainder of the sampling routine.	
SAMPLE 2 OF 48			
<table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">SAMPLE 2 OF 48</td> </tr> <tr> <td style="padding: 2px;">PUMPING 250 ml</td> </tr> </table>	SAMPLE 2 OF 48	PUMPING 250 ml	
SAMPLE 2 OF 48			
PUMPING 250 ml			
29	↓ ↓		
30 <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">DONE . . . 48 SAMPLES</td> </tr> <tr> <td style="padding: 2px;">6:10:35 4/21/90</td> </tr> </table>	DONE . . . 48 SAMPLES	6:10:35 4/21/90	This display appears when the routine is completed. It reports the status of the routine ("DONE"), the total number of sample events, and the current time and date.
DONE . . . 48 SAMPLES			
6:10:35 4/21/90			

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS


**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
45 of 60
January 13, 1992
EMD**

Category 3

ATTACHMENT 6 AUTOMATIC SAMPLER INTERACTIVE STATE STRUCTURE

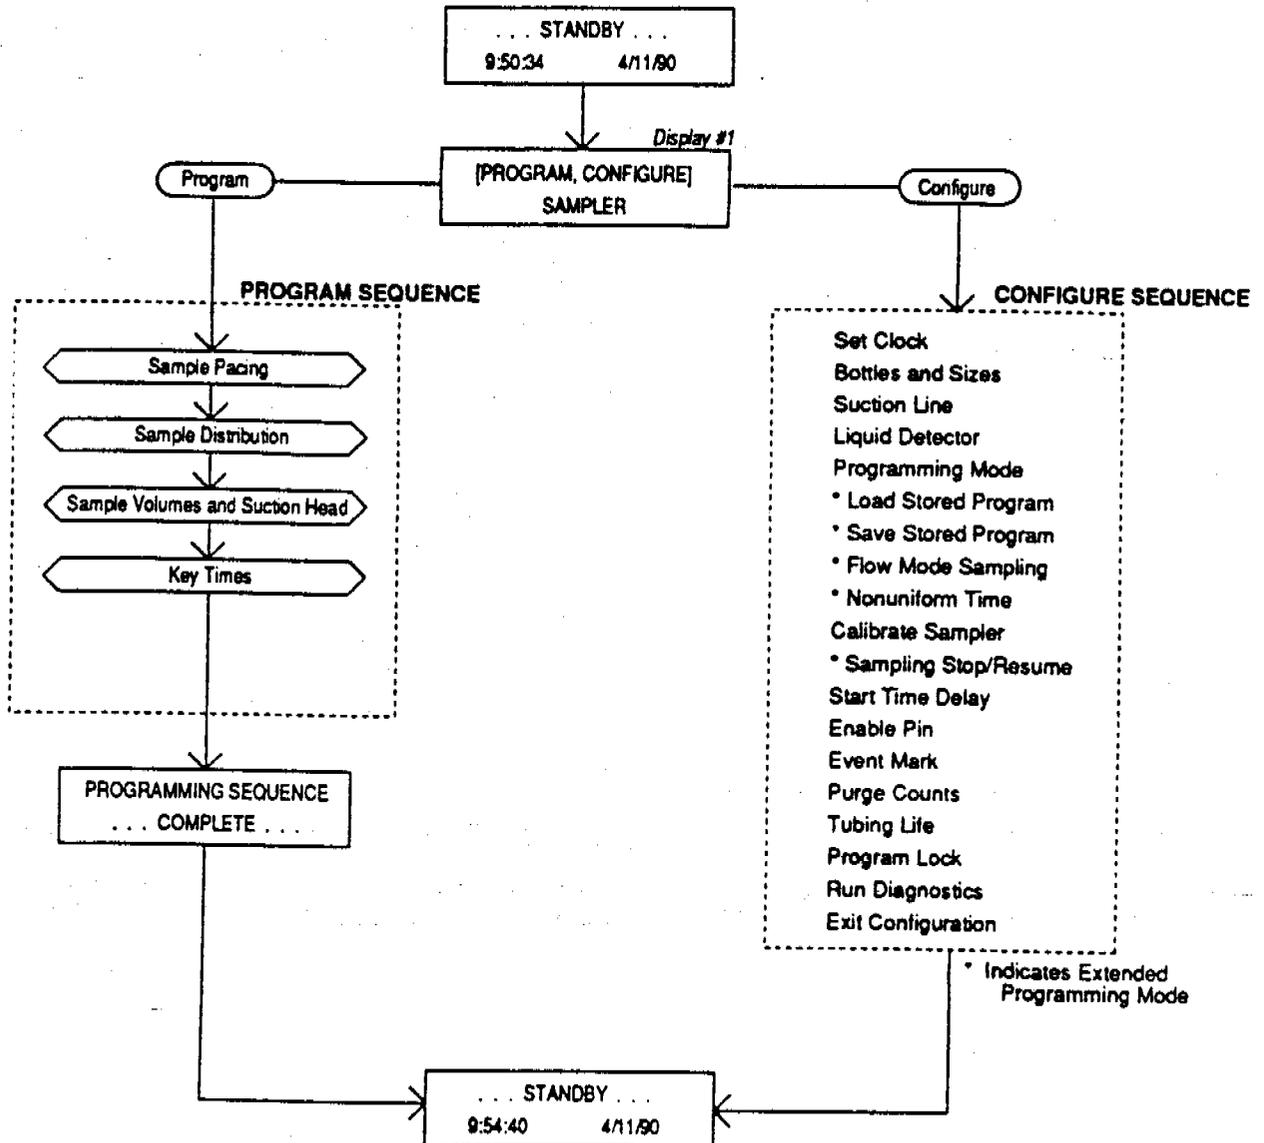

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
46 of 60
January 13, 1992
EMD**

Category 3

ATTACHMENT 7 AUTOMATIC SAMPLER CONFIGURE OPTION FUNCTIONS

Configure Option	Programming Mode	Function
Set Clock	Basic & Extended	Sets the sampler's real time clock.
Bottles and Sizes	Basic & Extended	Sets the number and size of bottles used in the tub.
Suction Line	Basic & Extended	Sets the type of line (vinyl or Teflon®), line diameter (1/4 or 3/8 inch), and line length (3 to 99 ft).
Liquid Detector	Basic & Extended	Enables/disables liquid detector, sets the number of rinse cycles (0 to 3), enables/disables the suction head entry, and sets the number of sampling retries (0 to 3).
Programming Mode	Basic & Extended	Sets the programming mode: basic or extended.
Load Program	Extended	Loads one of up to three previously saved sampling programs.
Save Program	Extended	Saves current sampling program.
Flow Paced Sampling	Extended	Directs sampler to take a sample at the beginning of a flow-paced program. Directs sampler to take a sample at time-switches.
Nonuniform Time	Extended	Directs sampler to accept nonuniform intervals as specific clock times or in minutes.
Calibrate Sampler	Basic & Extended	Enables/disables the calibration sequence.
Sampling Stop/Resume	Extended	Enables/disables Sampling Stops and Resumes feature.
Start Time Delay	Basic & Extended	Sets the start time delay (from 0 to 9999 minutes). If no start time is entered in the program sequence, the program will start after the set amount of time has elapsed after the START SAMPLING key is pressed or after the sampler is enabled.
Enable Pin	Basic & Extended	Enables/disables the master/slave sampling mode. Directs the sampler to take a sample when disabled and/or enabled by a Liquid Level Actuator or like device. Allows you to restart the sampling interval when the sampler is enabled.
Event Mark	Basic & Extended	Allows you to select one of four types of event marks.
Purge Counts	Basic & Extended	Adjusts the number of pre-sample and post-sample purge counts.
Tubing Life	Basic & Extended	Displays the pump tubing life information. Resets the tubing life count.
Program Lock	Basic & Extended	Enables/disables the password protection for input displays.
Run Diagnostics	Basic & Extended	Tests the RAM, ROM, pump, and distributor. Allows for re-initialization of certain program and configure settings.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
47 of 60
January 13, 1992
EMD

Category 3

ATTACHMENT 8 FLOW METER DESCRIPTION

The flow meters used during the event-related surface-water monitoring program will be the Isco Model 3220 and Model 3230 open-channel flow meters (Isco, Inc., 1990a; 1990b). These two types of flow meters have identical capabilities but differ in the type of in-channel pressure sensing device they utilize. The Isco Model 3220 meter utilizes a submerged probe with an internal pressure transducer. This probe senses hydrostatic pressure in the channel and produces an output signal that is boosted by an in-line amplifier that provides a useable signal to the flow meter. The Isco Model 3230 meter utilizes a bubbler system that measures hydrostatic pressure by sensing the pressure required to force a bubble of air out of a tube located in the bottom of the flow channel. A differential pressure transducer in the flow meter senses this pressure and converts it into an electrical signal that the meter uses to convert into water level.

Both flow meters are used, whenever possible, in conjunction with a primary flow-measurement device (weir or flume); otherwise an open channel is used where a stage-discharge relationship (rating curve) may be developed. Both flow meters also provide standard or optional flow-related output signals to be used for:

- Flow-proportional sampler pacing. Refer to Isco, Inc., 1990a; 1990b, for definition
- Recording flow rate information on an external printer/plotter or circular chart recorder
- Data transfer through a modem
- Control of a 4 - 20 milliampere (mA) device
- Data transfer by a laptop computer

Both models of flow meters contain microprocessor-controlled circuitry to make the computations necessary to calculate level and flowrates from the signals produced by their in-stream level measuring device, store programming instructions from the user, and operate the display and the internal plotter mechanism. An alphanumeric LCD is provided with each unit both to show current total flow, level, and flowrate information, and to prompt the user in programming the flow meter during initial set up or subsequent program changes. An internal plotter provides a "hard copy" printout of the information computed by the flow meter, plots level or flowrate, and generates reports. Connectors for other equipment that may be used with the Isco Model 3220 and Model 3230 are provided on the right side of the each flow meter's case.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
48 of 60
January 13, 1992
EMD

Category 3

ATTACHMENT 9 SWITCH AND KEYPAD DESCRIPTION

The operation and use of the switch and keypad are described in detail in the instruction manuals for the Model 3220 and Model 3230 flow meters (Isco, Inc., 1990a;1990b) and the following sections. Access to the switch and keypad is possible only when the door is opened. The LCD and the internal plotter are visible through the window in the front door of the cabinet.

ON/OFF Toggle Switch - Turning the ON/OFF switch to the "ON" position turns on the flow meter. Once powered, the flow meter will begin to display level, flowrate, and total flow, and may be programmed. If the flow meter is already operating and the ON/OFF switch is turned "OFF", the LCD will go blank and the flow meter will stop accumulating data. However, the program entries and the stored data will be retained in memory by a lithium battery. Each time the flow meter is reprogrammed, the latest program will be retained in memory.

Keypad Layout and Functions - The keypad is mounted in the lower right quarter of the flow meter front panel. It is not visible when the cabinet door is closed. The keypad has 22 keys arranged in four vertical columns. The function of each key is as follows:

<- (ARROW LEFT) - This key is used in combination with the display to move to the left when selecting a menu option. It is also used in the "LEVEL ADJUST" step of the program; it can be used in place of the number keys to decrease the level shown on the display.

-> (ARROW RIGHT) - This key is used in combination with the display to move to the right when selecting a menu option and is used in the "LEVEL ADJUST" step of the program; it can be used instead of the number keys to increase the level shown on the display.

+/- (PLUS OR MINUS) - This key is used to enter an addition or subtraction sign when programming an equation. Pressing this key when the flow meter is in the normal condition (displaying level or flow) will provide the user with the status of the Sampler Enable feature and the revision number of the installed software.

PRINT PROGRAM - If the Isco Model 3230 and Model 3220 are in the normal operating state (plotting level or flow and accumulating data), pressing this key causes a "hard copy" of the program selections entered

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
49 of 60
January 13, 1992
EMD

Category 3

to be printed by the flow meter's internal plotter. While printing, the flow meter will keep track of the total flow and time. After printing the program selections the flow meter will go back to plotting flowrate or level.

CHART ADVANCE - Pressing this key will cause the internal plotter to advance the chart at the fastest speed. The paper will advance as long as the key is pressed.

.(DECIMAL) - This key is used with the number keys when entering numeric values into the program.

NUMBER KEYS - The number keys are used to enter numeric values into the program. They may also be used to make a selection from the menus displayed on the LCD.

ENTER PROGRAM STEP - When the flow meter is powered up, (that is, the power switch turned on) pressing this key will allow the user to enter the program to make changes. The user should be aware that the flow meter *always* has a program in it and is *always* in one of three states: (1) the flow meter is "off," but with a program retained in memory; (2) the flow meter is "on" and the program is running (displaying level, total flow, etc.); or (3) the flow meter is "on" with the program running, but allowing changes to be entered. Pressing "ENTER PROGRAM STEP" puts the flow meter in the third condition by allowing the user to enter the program. It is also possible to view the program held in memory by pressing this key. The program step will be displayed and the selected entry will flash. Pressing this key after having made a selection from the displayed menu will cause the value entered or the menu option displayed to be accepted into memory, after which the program will advance to the next step.

RETURN ENTRY - This key provides the user with a way to return to a previous entry of a program step.

GO TO PROGRAM STEP - Pressing this key followed by pressing the number key or keys corresponding to a particular program step will cause the flow meter to display that program step. This allows the user to go directly to a specific program step. When this key is pressed, the following will appear on the top line of the display: "ENTER PROGRAM STEP NUMBER 1-12." The user then selects the number of the program step he/she wishes to view and presses the "ENTER PROGRAM STEP" key. If a correct value is entered, that step will be displayed. If an incorrect number is entered, the display will again show "ENTER PROGRAM STEP NUMBER 1-12."

EXIT PROGRAM - This key is used to put the flow meter back into the "running" state after "ENTER PROGRAM STEP" has allowed the user to make changes to the program. "EXIT PROGRAM" is also used

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
50 of 60
January 13, 1992
EMD

Category 3

to view stored data. Note that in certain cases, if the user attempts to exit after program changes have been made, a warning message will prompt the user either to continue with programming or exit and discard the changes. The user cannot change selections for a program step without having gone through all the "sub-steps" for that particular program step. (It is not necessary to change all the "sub-steps", but the user should step through all of them before any changed selections are entered into the program memory.) If program lock is enabled (step 12) the display will request entry of the pass number (3230 or 3220) allowing any changes to be entered into memory. Program step number 12 allows the user to disable this automatic lock feature; the lock must be disabled to enter any changes to the program.

PRINT REPORT - This key is used to print a flow data or level data report if the report generation feature has been enabled. Pressing this key provides the user with a report printed on the internal plotter. The printed report will begin at the last start interval and end at the current time. Pressing this key will not affect the scheduled time interval that the report generator is to collect data; it gives the user a report running from the last report interval start time to the time the user presses the key.

PURGE (Model 3230 only) - This key is used to purge the bubble line by actuating a solenoid valve that allows the full pressure of the air in the system to be discharged into the bubble line. The pump will run at the same time. The pump will continue to run for a short time after the key is released.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
51 of 60
January 13, 1992
EMD

Category 3

ATTACHMENT 10 INTERNAL PLOTTER DESCRIPTION

The internal plotter provides a "hard copy" of level or total flow and flowrate information over time. It also provides sampling information and a printout of the parameters programmed into the flow meter's memory. The internal plotter may be programmed to advance at speeds of 0.5, 1, 2, or 4 inches per hour. The chart is visible through the cabinet window when the door is closed. The plotter detects when it has run out of paper and will shut off automatically. This does not affect the operation of the flow meter: measurements can continue to be made and data will continue to accumulate in the flow meter's memory. However, the flow meter will not be able to print.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
52 of 60
January 13, 1992
EMD

Category 3

ATTACHMENT 11 PROGRAMMING OVERVIEW

First, the user should remember that the flow meter always has a program in it, stored in memory, even if only the "default" program installed at the factory. Then, the user should recall that the program is always "running" (flow meter in normal operation accumulating and plotting data) even when allowing the user to make changes. In programming the Isco Model 3230 and Model 3220, the user must first enter the program by pressing the "ENTER PROGRAM STEP" key; then the user selects choices from the menus presented on the display which are pertinent for his/her application. After a particular selection is made, it is entered into the flow meter's memory by pressing the "ENTER PROGRAM STEP" key.

Program Steps - Following is a list of the 12 program steps available to set up a flow monitoring program. Each program step is displayed in the following sequence on the dot matrix display. Repeatedly pressing the "ENTER PROGRAM STEP" key will cause the flow meter to sequence through the steps in order, or the user can access a particular step by using the "GO TO PROGRAM STEP" key and entering the number of the desired step.

1. SELECT MODE OF OPERATION
2. SELECT SAMPLER FLOW PACING
3. SELECT PLOTTER MODE OF OPERATION
4. ENTER PLOTTER FULL-SCALE READING
5. SELECT PLOTTER CHART SPEED
6. SET CALENDAR/CLOCK
7. SITE IDENTIFICATION NUMBER
8. SET AUTO PURGE FREQUENCY
9. ADJUST LEVEL
10. RESET FLOW TOTALIZER
11. REPORT GENERATION
12. ENABLE LOCK

Display Prompts - A list of program steps and corresponding text displayed during program setup is shown in Section 6.2.1. To enter a selection for a particular step, the user presses the number key associated with the selection wanted, or uses the <- (arrow left) or -> (arrow right) keys to move back and forth across the display. The selected text will then begin flashing, indicating that this value will be accepted when the "ENTER" key is pressed. If a number is flashing, this indicates that a numeric entry is required from the number keys. The quantity entered will be accepted when the "ENTER" key is pressed.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
53 of 60
January 13, 1992
EMD

Category 3

ATTACHMENT 12 NICAD and LEAD-ACID BATTERY PACKS

Determining Charge - Because the nicad battery will show an almost constant output voltage regardless of state-of-charge, voltage measurements are of no value. The battery should be left on charge for 15 to 18 hours. While charging, the battery will stay cool to the touch; when charged, the battery will feel warm. Charging current will be dissipated as heat. Charging should be discontinued when the battery feels

Hazards of Overcharging - Overcharging the battery causes it to overheat, gradually breaking down the separator material inside the battery. Repeated overcharging will reduce the useable life of the battery, and should be avoided. If an Isco Power Pack is used, the battery may be overcharged occasionally with little loss of capacity.

Self-Discharge Characteristic - When recharged, the nicad battery should be returned to service within a reasonable period of time (two to three weeks) to ensure the availability of most of the battery's capacity. The reason for this suggestion is that nicad batteries exhibit higher rates of self-discharge than some other batteries. Unlike some types of nonrechargeable "primary" batteries (such as alkalines) that can stay on the shelf for several years without losing their charge, nicad batteries will discharge themselves completely in a matter of months.

Charging with Other Source - Isco does *not* recommend the use of any other charging apparatus to recharge the battery pack, as it is possible to damage the batteries or the charger with incompatible equipment.

Internal Fuse - To minimize the possibility of a dangerous rate of discharge in the event of a short circuit, the nicad battery is internally fused at approximately 50 amperes. The lead-acid batteries do not require internal fusing because of their inherently high internal impedance.

Vent Holes - The nicad battery has two small vent holes on the top of the inside case cover. These holes are provided as pressure relief should the battery be overcharged or otherwise malfunction. The cells under this cover are packed in grease to prevent corrosion. Some grease may eventually find its way through these vent holes. The presence of grease around these vent holes does not indicate a battery malfunction or failure.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
54 of 60
January 13, 1992
EMD

ATTACHMENT 13 INTERNAL PLOTTER EXAMPLE REPORT

An example of a report printed by the Isco Model 3220 or Model 3230 is as follows:

SITE 123 - INTERVAL FROM
13-MAR-89 18:00 TO 14-MAR-89 06:00

MAXIMUM LEVEL: 0.455 FT
ON 13-MAR-89 AT 20:13
MINIMUM LEVEL: 0.424 FT
OCCURRED 6 TIMES
FIRST ON 13-MAR-89 AT 22:03
LAST ON 14-MAR-89 AT 01:14
MAXIMUM FLOW RATE: 0.348 CFS
ON 13-MAR-89 AT 20:13
MINIMUM FLOW RATE: 0.292 CFS
OCCURRED 6 TIMES
FIRST ON 13-MAR-89 AT 22:03
LAST ON 14-MAR-89 AT 01:14
AVERAGE FLOW RATE: 0.312 CFS
INTERVAL FLOW VOLUME : 13546 CF
TOTAL FLOW VOLUME : 19935 CF
NUMBER OF SAMPLES: 0

In this example, the report generator is set up to print at 12-hour intervals starting at 18:00. The report lists the maximum level of 0.455 ft and the date and time that it occurred. The minimum level was 0.424 ft and it occurred six times, the first time at 22:03 on the 13th, and the last time at 01:14 on the 14th. The minimum and maximum flow rates are also listed along with the date and time they occurred.

The average flow rate from 18:00 13-MAR-89 to 06:00 14-MAR-89 was 0.312 CFS and the volume during the same time interval was 13546 CF.

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
55 of 60
January 13, 1992
EMD**

Category 3

The TOTAL FLOW VOLUME line lists the value of the front panel totalizer at the end of the reporting interval (06:00 14-MAR-89). This may be used for quickly calculating the total flow volume over multiple reports. Rather than totaling the individual report interval values, it is possible to simply subtract the total flow volume from two reports to calculate the total volume that occurred from the ending time of the first report to the ending time of the last report.

The NUMBER-OF-SAMPLES line indicates the number of samples collected by the sampler that may be attached to the Isco Model 3220 or Model 3230. It reports only the number of samples within the reporting interval.


OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
56 of 60
January 13, 1992
EMD

ILLUSTRATION 1 ISCO MODEL 3700 R REFRIGERATED SAMPLER

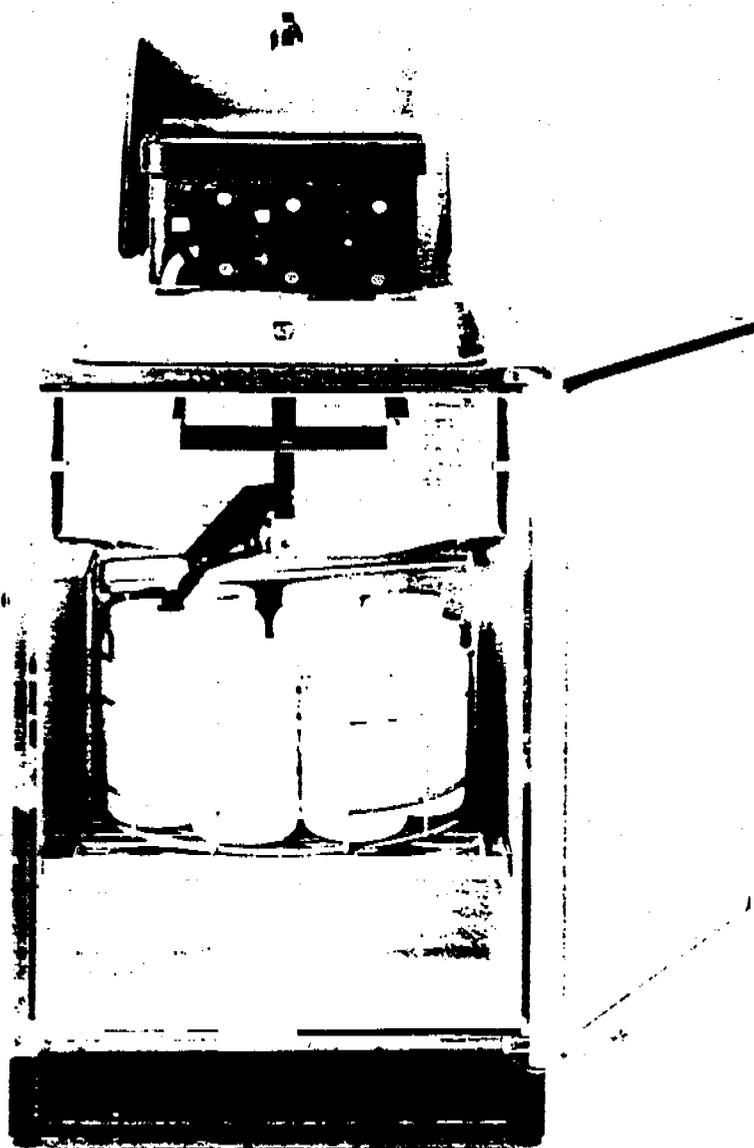

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS


**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

Category 3

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
57 of 60
January 13, 1992
EMD**

ILLUSTRATION 2 ISCO MODEL 3700 PORTABLE SAMPLER

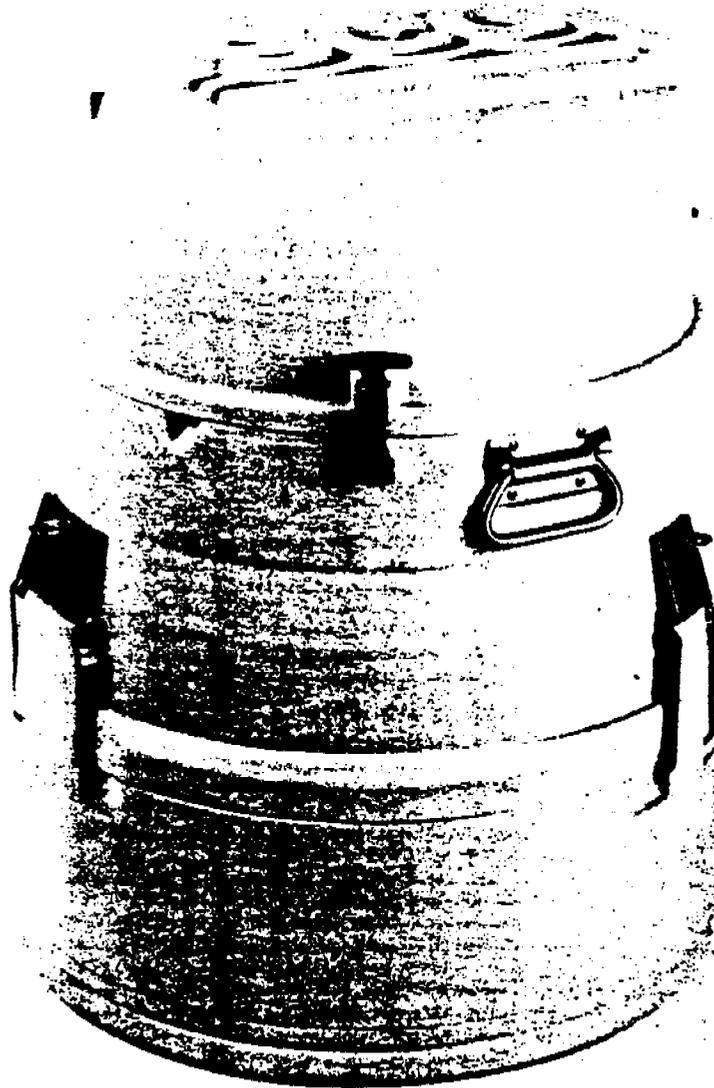

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS


EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL

Category 3

Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
58 of 60
January 13, 1992
EMD

ILLUSTRATION 3 ISCO MODEL 3220 FLOW METER FRONT PANEL

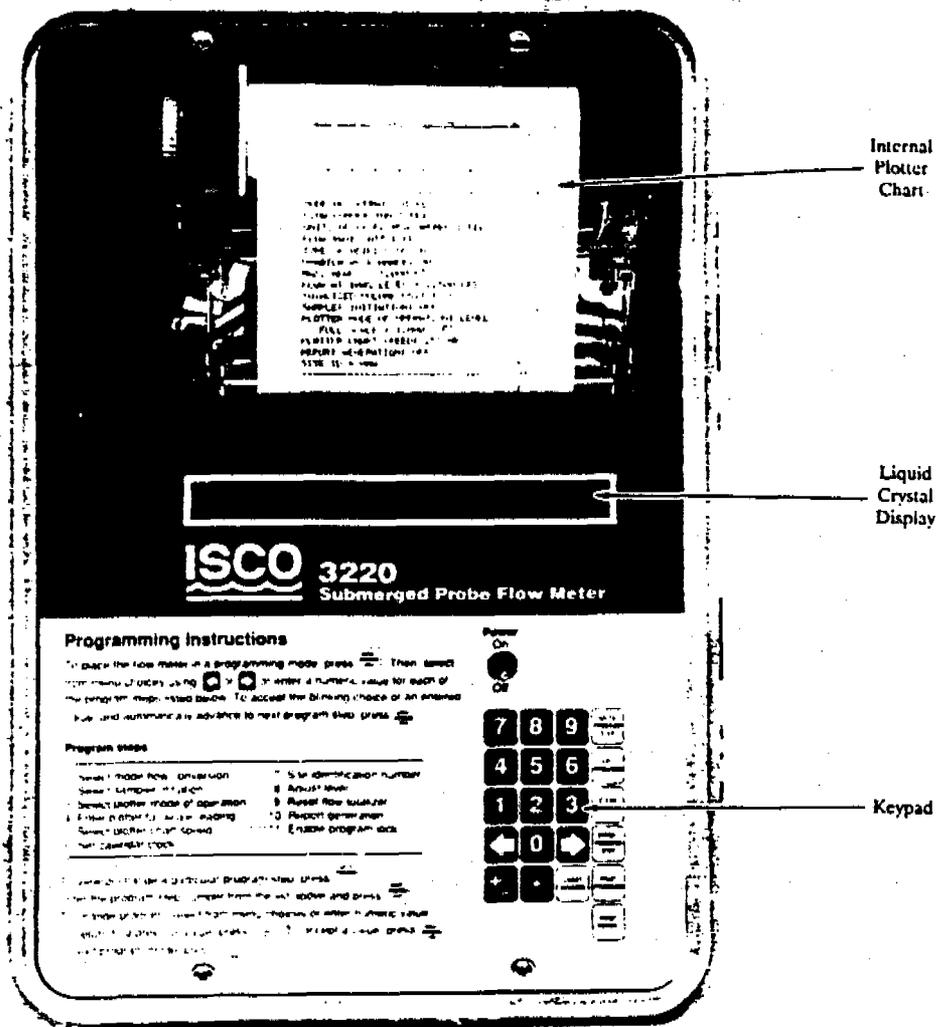

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL


Manual:
Procedure No.:
Page:
Effective Date:
Organization:

5-21000-OPS
SW.11, Rev. 1
59 of 60
January 13, 1992
EMD

Category 3

ILLUSTRATION 4 ISCO MODEL 3230 FLOW METER SIDE VIEW

"L" Brackets for Attaching Carrying Handle or Optional Suspension Harness

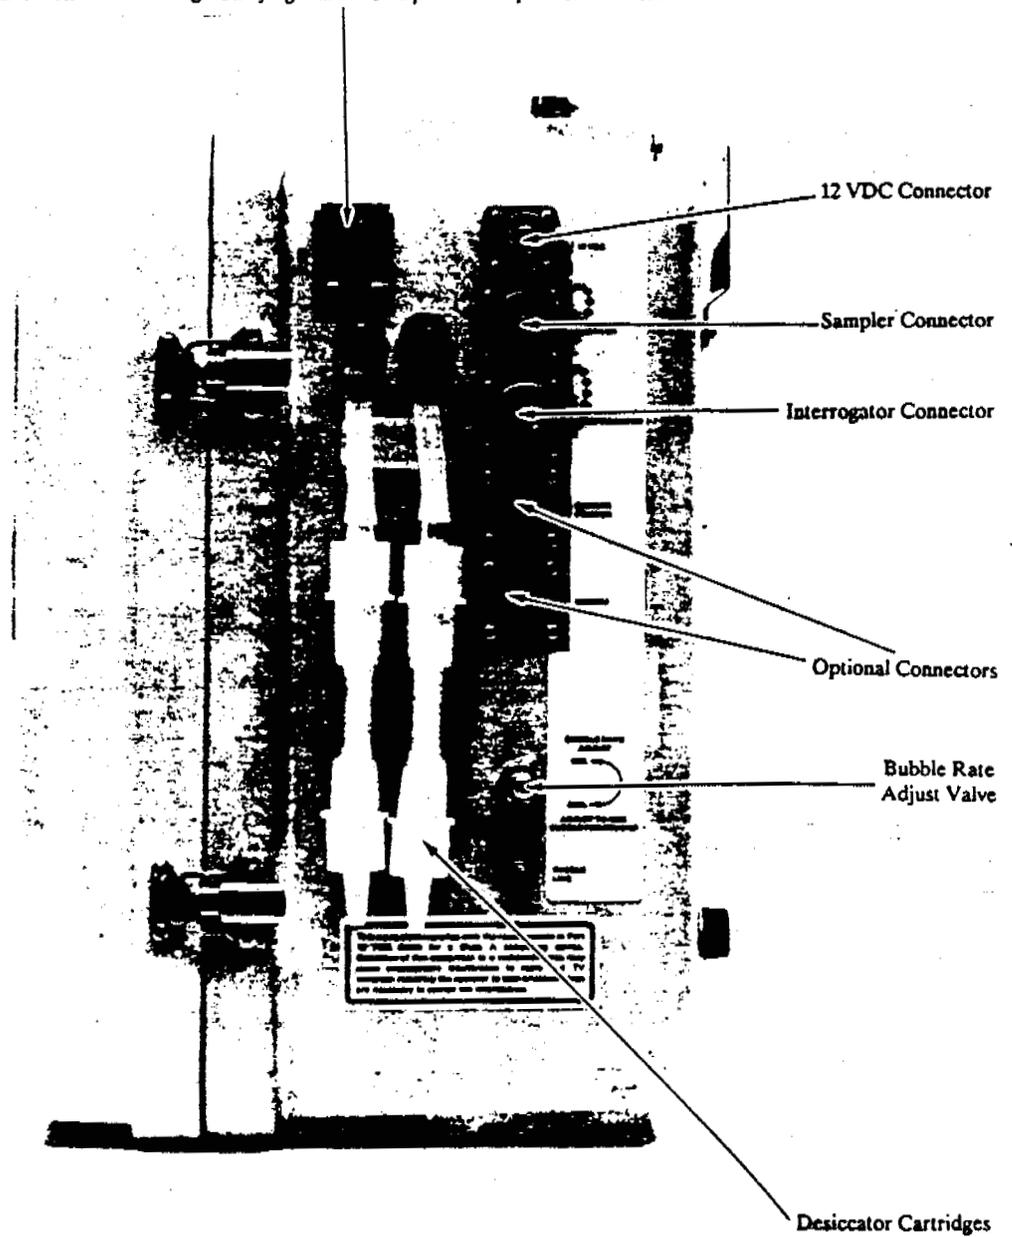

OPERATION AND MAINTENANCE OF STREAM-GAGING AND SAMPLING STATIONS

**EG&G ROCKY FLATS PLANT
EMD OPERATING PROCEDURES
MANUAL**

**Manual:
Procedure No.:
Page:
Effective Date:
Organization:**

**5-21000-OPS
SW.11, Rev. 1
60 of 60
January 13, 1992
EMD**

ILLUSTRATION 5 24-POSITION KEYPAD

